

Submit 1 Copy To Appropriate District Office

District I - (575) 393-6161

1625 N. French Dr., Hobbs, NM 88240

District II - (575) 748-1283

811 S. First St., Artesia, NM 88210

District III - (505) 334-6178

1000 Rio Brazos Rd., Aztec, NM 87410

District IV - (505) 476-3460

1220 S. St. Francis Dr., Santa Fe, NM 87505

State of New Mexico
Energy, Minerals and Natural Resources

OIL CONSERVATION DIVISION
1220 South St. Francis Dr.
Santa Fe, NM 87505

Form C-103
Revised July 18, 2013

WELL API NO.

30-025-24459

5. Indicate Type of Lease

STATE ☐ FEE ☒

6. State Oil & Gas Lease No.

7. Lease Name or Unit Agreement Name

Ojo Chiso

8. Well Number

1

9. OGRID Number

370997

10. Pool name or Wildcat

Devonian

SUNDRY NOTICES AND REPORTS ON WELLS

(DO NOT USE THIS FORM FOR PROPOSALS TO DRILL OR TO DEEPEN OR PLUG BACK TO A DIFFERENT RESERVOIR. USE "APPLICATION FOR PERMIT" (FORM C-101) FOR SUCH PROPOSALS.)

1. Type of Well: Oil Well ☐ Gas Well ☒ Other SWD

2. Name of Operator

Grama Ridge Disposal, LLC

3. Address of Operator

Box 1105 Eunice, NM 88231

4. Well Location

Unit Letter E : 1980 feet from the N line and 660 feet from the W line

Section 23 Township 22 Range 34E NMPM Lea County

11. Elevation (Show whether DR, RKB, RT, GR, etc.)

GL 3482

12. Check Appropriate Box to Indicate Nature of Notice, Report or Other Data

NOTICE OF INTENTION TO:

PERFORM REMEDIAL WORK ☒ PLUG AND ABANDON ☐

TEMPORARILY ABANDON ☐ CHANGE PLANS ☐

PULL OR ALTER CASING ☐ MULTIPLE COMPL ☐

DOWNHOLE COMMINGLE ☐

CLOSED-LOOP SYSTEM ☐

OTHER: Convert to SWD ☒

SUBSEQUENT REPORT OF:

REMEDIAL WORK ☐ ALTERING CASING ☐

COMMENCE DRILLING OPNS. ☐ P AND A ☐

CASING/CEMENT JOB ☐

OTHER: ☐

13. Describe proposed or completed operations. (Clearly state all pertinent details, and give pertinent dates, including estimated date of starting any proposed work). SEE RULE 19.15.7.14 NMAC. For Multiple Completions: Attach wellbore diagram of proposed completion or recompletion.

As per Administrative Order 1657, Grama Ridge proposes to convert the Ojo Chiso to a SWD.

(See attached Workplan)

HOBBS OCD

DEC 07 2016


RECEIVED

Spud Date:

Rig Release Date:

I hereby certify that the information above is true and complete to the best of my knowledge and belief.

SIGNATURE

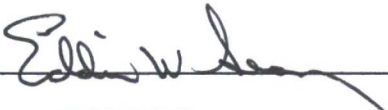

TITLE Agent

DATE 12/1/16

Type or print name Eddie W. Seay


E-mail address: seay04@leaco.net

PHONE: 575-392-2236

For State Use Only

Petroleum Engineer

APPROVED BY:

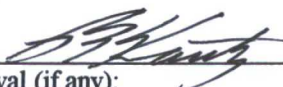

TITLE

DATE 12/08/16

Conditions of Approval (if any):

WORKPLAN
Convert to SWD
Ojo Chiso #1
API 30-025-24459

1. Notify OCD when work begins, install new anchors.
2. Remove dry hole marker and stall appropriate well head.
3. Move in rig, drill out all plugs down to base of 7 5/8" liner 13360' , and in open hole section to 14665' .
4. Run 5 1/2" casing from surface to 14665' , circulate cement to surface behind 5 1/2" , squeezing off perfs at 11725' and 13181' . WOC, run CBL.
5. Clean out open hole section down to 15000' .
6. Acidize open hole section as needed and logs.
7. Run 3 1/2" tubing and 5 1/2" pkr. set at approximately 14565' or within 100 ft. of top of open hole section.
8. Load backside with pkr. fluid.
9. Notify OCD, run MIT.
10. Put on injection, file sundry reports.

HOBBS OCD

DEC 07 2016

RECEIVED