

OCD	
Submit 1 Copy To Appropriate District Office District I – (575) 393-6161 1625 N. French Dr., Hobbs, NM 88240 District II – (575) 748-1283 811 S. First St. Attacia, NM 88210 OIL CONSERVATION DIVISION	Form C-103 Revised July 18, 2013 WELL API NO. 30-025-05125
Santa Ti - (505) 374-61293 811 S. First St., Artesia, NM 88210 District III - (505) 334-6178 1000 Rio Brazos Rd., Aztec, NM 87410 District IV - (505) 476-3460 1220 S. St. Francis Dr., Santa Fe, NM 87505 Santa Fe, NM 87505	5. Indicate Type of Lease STATE FEE 6. State Oil & Gas Lease No.
SUNDRY NOTICES AND REPORTS ON WELLS (DO NOT USE THIS FORM FOR PROPOSALS TO DRILL OR TO DEEPEN OR PLUG BACK TO A DIFFERENT RESERVOIR. USE "APPLICATION FOR PERMIT" (FORM C-101) FOR SUCH PROPOSALS,)	7. Lease Name or Unit Agreement Name Buckley B
1. Type of Well: Oil Well	8. Well Number 2
2. Name of Operator Resolute Natural Resources Co., LLC	9. OGRID Number 295770
3. Address of Operator 1700 Lincoln St, Ste 2800 Denver, CO 80203	10. Pool name or Wildcat Devonian
	330 feet from the West line
Section 25 Township 14S Range 37E	NMPM County Lea
11. Elevation (Show whether DR, RKB, RT, GR, etc.) 3812' GL	
12. Check Appropriate Box to Indicate Nature of Notice, Report or Other Data NOTICE OF INTENTION TO: PERFORM REMEDIAL WORK ☐ PLUG AND ABANDON ★☐ REMEDIAL WORK ☐ INT TO PA	
TEMPORARILY ABANDON	LLING OPNS. P&A NR
OTHER: OTHER:	<u> </u>
13. Describe proposed or completed operations. (Clearly state all pertinent details, and give pertinent dates, including estimated date of starting any proposed work). SEE RULE 19.15.7.14 NMAC. For Multiple Completions: Attach wellbore diagram of proposed completion or recompletion. Resolute Natural Resources Co., LLC proposes to PEA the subject well with the following:	
1. Tag bottom @ 15,652' and circulate hole with mud. Pressure test csg to 500 psi	
2. Perf @ 4,824' and squeeze 8 5/8" shoe with 30 sacks. Wait on cement and tag.	TIFY OCD 24 HOURS PRIOR TO OPERATIONS
 Perf @ 3,100' and squeeze with 30 sacks. Wait on cement and tag. Perf @ 2,200' and squeeze with 30 sacks. Wait on cement and tag. 	OURS PRIORATION
 Perf @ 423' and circulate cement to surface. 	24 HOGING O
 Remove wellhead and confirm cement to surface on all strings. 	TEX OCO PLUGE
7. Install dry hole marker and remove anchors 3' below ground level.	CINNING
8. Restore surface to condition prior to drilling. 9. Have NMOCD inspect P & A location.	
Spud Date: Rig Release Date:	
I hereby certify that the information above is true and complete to the best of my knowledge and belief.	
SIGNATURE Aluss TITLE Sr Regualtory Analyst DATE 12-13-16	
For State Use Only	
APPROVED BY: Mal White TITLE Petroleum Engr. Specialist DATE 12/15/2016 Conditions of Approval (if any):	

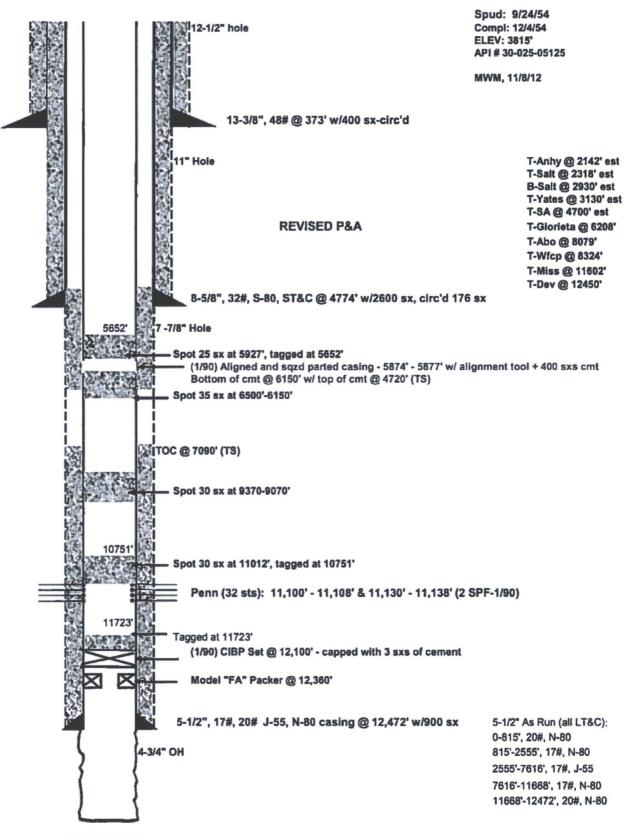

TD @ 12,605'

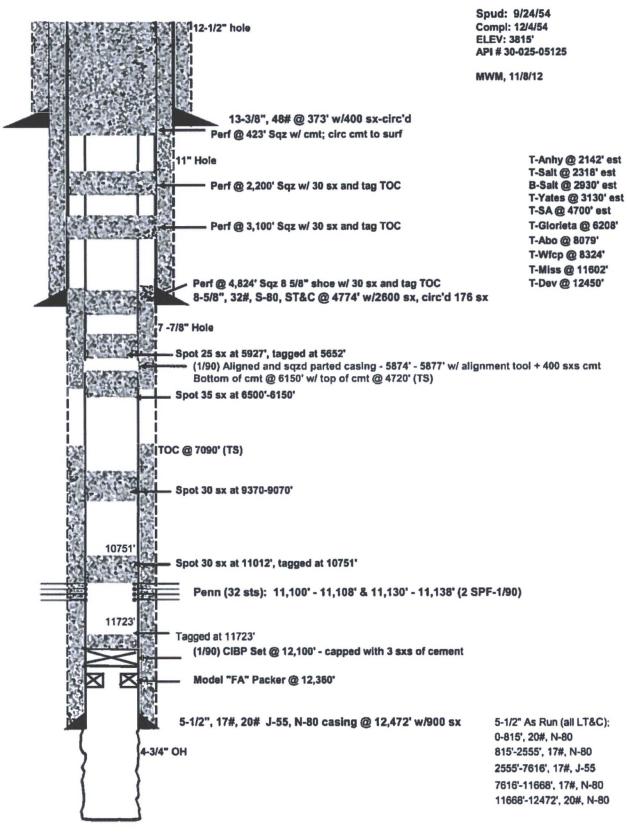

TD @ 12,605'