

Form 3160-5
(June 1990)UNITED STATES
DEPARTMENT OF THE INTERIOR
BUREAU OF LAND MANAGEMENTFORM APPROVED
Budget Bureau No. 1004-0135
Expires: March 31, 1993

5. Lease Designation and Serial No.

LC-029410B

6. If Indian, Allottee or Tribe Name

7. If Unit or CA, Agreement Designation

8. Well Name and No.

Brown Federal #3

9. API Well No.

30-025-30438

10. Field and Pool, or Exploratory Area

Pearsall Seven Rivers

11. County or Parish, State

Lea, NM

SUNDRY NOTICES AND REPORTS ON WELLS

Do not use this form for proposals to drill or to deepen or reentry to a different reservoir.
Use "APPLICATION FOR PERMIT—" for such proposals

SUBMIT IN TRIPLICATE

1. Type of Well

☒ Oil Well ☐ Gas Well ☐ Other

2. Name of Operator

COG Operating LLC

3. Address and Telephone No.

550 W. Texas, Suite 1300 Midland, TX 79701 (432) 685-4372

4. Location of Well (Footage, Sec., T. R., M. or Survey Description)

445 FNL & 990 FEL, Sec. 31 T17S R32E

12. CHECK APPROPRIATE BOX(s) TO INDICATE NATURE OF NOTICE, REPORT, OR OTHER DATA

TYPE OF SUBMISSION

- ☒
- Notice of Intent
-
- ☐
- Subsequent Report
-
- ☐
- Final Abandonment Notice


TYPE OF ACTION

- ☒
- Abandonment
-
- ☐
- Recompletion
-
- ☐
- Plugging Back
-
- ☐
- Casing Repair
-
- ☐
- Altering Casing
-
- ☐
- Other _____
-
- ☐
- Change of Plans
-
- ☐
- New Construction
-
- ☐
- Non-Routine Fracturing
-
- ☐
- Water Shut-Off
-
- ☐
- Conversion to Injection
-
- ☐
- Dispose Water

(Note: Report results of multiple completion on Well Completion or Recompletion Report and Log form.)

13 Describe Proposed or Completed Operations (Clearly state all pertinent details, and give pertinent dates, including estimated date of starting any proposed work. If well is directionally drilled, give subsurface locations and measured and true vertical depths for all markers and zones pertinent to this work)*

1. Notify BLM 24 hours prior to starting plugging operations.
2. Set CIBP @ 2347' w/35' cement cap and circ hole with mud.
3. Set 100' plug from 850-750' 50' above and below shoe. WOC and tag.
4. Set 10sx surface plug.
5. Install dry hole marker.

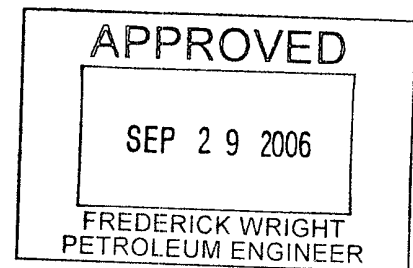

14. I hereby certify that the foregoing is true and correct

Signed Gary W. ShenellTitle Production ClerkDate 9/27/06

(This space for Federal or State office use)

Approved by _____

Conditions of approval, if any: _____

Title _____

Date _____

Title 18 U.S.C. Section 1001, makes it a crime for any person knowingly and willfully to make to any department or agency of the United States any false, fictitious or fraudulent statements or representations as to any matter within its jurisdiction.


GWW

•See Instruction on Reverse Side

SUNDRY NOTICE SPECIAL STIPULATIONS

1. CIBP must be set within 100' of the top perforations, in the 5 ½ inch casing.
2. 25 sack cement plugs must be set @ 2300' at the base of the salt and @ 1200', the top of the salt in addition to the shoe of the 8 5/8 casing.
3. The surface plug must be at least 25 sacks of cement.

MACK ENERGY CORPORATION
BROWN FED #3
Sec 31 T17S R32E 445FNL 990FEL

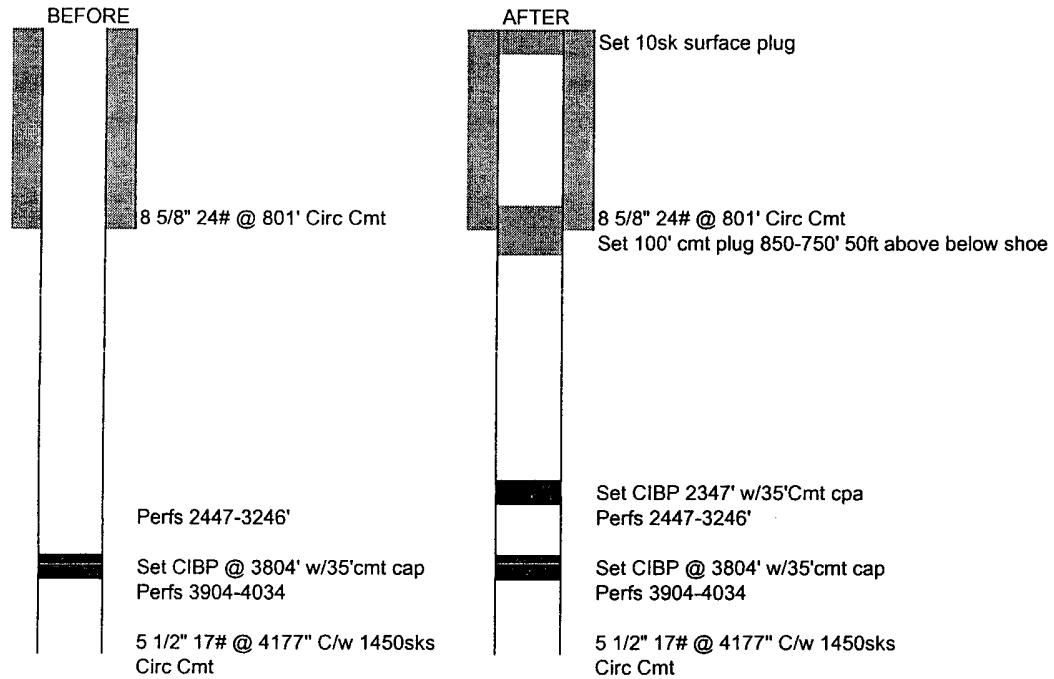

- 1 Notify BLM 24hrs of plugging
- 2 Set CIBP @ 2347' w/35'cmt cap circ hole w/mud
- 3 Set 100' cmt plug 850-750' 50ft above below shoe
- 4 Set 10sk surface plug
- 5 Install dry hole marker