

UNITED STATES
DEPARTMENT OF THE INTERIOR
BUREAU OF LAND MANAGEMENT

OCD-HOBBS

FORM APPROVED
OMB No. 1004-0137
Expires: July 31, 2010

SUNDRY NOTICES AND REPORTS ON WELLS

Do not use this form for proposals to drill or to re-enter an abandoned well. Use Form 3160-3 (APD) for such proposals.

5. Lease Serial No.
LC-032650-B

6. If Indian, Allottee or Tribe Name

SUBMIT IN TRIPLICATE – Other instructions on page 2.

1. Type of Well

☒ Oil Well ☐ Gas Well ☐ Other

2. Name of Operator
LEGACY RESERVES OPERATING LP

3a. Address
P.O. BOX 10848
MIDLAND, TX 79702

3b. Phone No. (include area code)
(432)689-5200

7. If Unit of CA/Agreement, Name and/or No.

8. Well Name and No.
SOUTH JUSTIS UNIT "G" WELL #21

9. API Well No.
30-025-11743

10. Field and Pool or Exploratory Area
JUSTIS-BLBRY-TUBB-DRINKARD

4. Location of Well (Footage, Sec., T., R., M., or Survey Description)
2080' FSL & 1980' FEL, UNIT LETTER "J", SECTION 24, T-25-S, R-37-E


11. Country or Parish, State
LEA COUNTY, NEW MEXICO

12. CHECK THE APPROPRIATE BOX(ES) TO INDICATE NATURE OF NOTICE, REPORT OR OTHER DATA

TYPE OF SUBMISSION	TYPE OF ACTION			
☒ Notice of Intent	☐ Acidize	☐ Deepen	☐ Production (Start/Resume)	☐ Water Shut-Off
☐ Subsequent Report	☐ Alter Casing	☐ Fracture Treat	☐ Reclamation	☐ Well Integrity
☐ Final Abandonment Notice	☐ Casing Repair	☐ New Construction	☐ Recomplete	☐ Other _____
	☐ Change Plans	☐ Plug and Abandon	☐ Temporarily Abandon	
	☐ Convert to Injection	☐ Plug Back	☐ Water Disposal	

13. Describe Proposed or Completed Operation: Clearly state all pertinent details, including estimated starting date of any proposed work and approximate duration thereof. If the proposal is to deepen directionally or recompleat horizontally, give subsurface locations and measured and true vertical depths of all pertinent markers and zones. Attach the Bond under which the work will be performed or provide the Bond No. on file with BLM/BIA. Required subsequent reports must be filed within 30 days following completion of the involved operations. If the operation results in a multiple completion or recompleat in a new interval, a Form 3160-4 must be filed once testing has been completed. Final Abandonment Notices must be filed only after all requirements, including reclamation, have been completed and the operator has determined that the site is ready for final inspection.)

LEGACY RESERVES OPERATING LP REQUEST PERMISSION TO RE-TEST AND CONTINUE THE TA STATUS OF THE SUBJECT WELL. LEGACY TOOK OVER AS OPERATOR OF THE LEASE EFFECTIVE 8/1/2006. DURING THE PAST YEAR NUMEROUS WELLS HAVE BEEN STIMULATED AND PRODUCTION INCREASED IN THIS FIELD. WE WOULD LIKE SOME TIME TO EVALUATE RETURNING THIS WELL TO PRODUCTION.

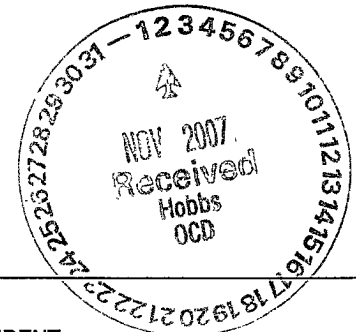

14. I hereby certify that the foregoing is true and correct.

Name (Printed/Typed)
DANNY M. BROCK

Title PRODUCTION SUPERINTENDENT

Signature

Danny M. Brock

Date 10/18/2007

THIS SPACE FOR FEDERAL OR STATE OFFICE USE

Approved by *[Signature]* /S/ DAVID R. GLASS

PETROLEUM ENGINEER

Date OCT 31 2007

Conditions of approval, if any, are attached. Approval of this notice does not warrant or certify that the applicant holds legal or equitable title to those rights in the subject lease which would entitle the applicant to conduct operations thereon.

Title

Office

SEE ATTACHED FOR

Title 18 U.S.C. Section 1001 and Title 43 U.S.C. Section 1212, make it a crime for any person knowingly and willfully to make to any department or agency of the United States any false, fictitious or fraudulent statements or representations as to any matter within its jurisdiction.

BUREAU OF LAND MANAGEMENT
Carlsbad Field Office
620 East Greene Street
Carlsbad, New Mexico 88220-6292
(505) 234-5972

Temporary Abandonment of Wells on Federal Lands
Conditions of Approval

A temporary abandoned well is defined as a completion that is not capable of production in paying quantities but may have value as a service well. Pursuant to 43 CFR 3162.3-4(c), no well may be temporarily abandoned for more than 30 days without the prior approval of the authorized officer.

Temporary Abandonment (TA) status approval requires a successful casing integrity test as follows:

1. A Notice of Intent (NOI) Sundry Notice (Form 3160-5) requesting approval to run a mechanical integrity test (MIT) or casing integrity test (CIT).
2. A description of the temporary abandonment procedure.
- A. A bridge plug or packer must be installed as close to 50 feet above any open perforations or open hole as possible. If a cement plug is used, the top of the cement must be verified by tagging.
- B. The wellbore must be filled with corrosion inhibited fluid and pressure tested to 500 psi. The casing shall be capable of holding this pressure for at least 30 minutes with a 10% allowable leakoff.
- C. All downhole production/injection equipment (tubing, rods, etc.) shall be removed from the casing if they are not isolated by a packer.
- D. A bradenhead test must be conducted. If the test indicates a problem exists, a remedial plan and time frame for remediation shall be submitted within ninety (90) days of the test.
- E. Contact the appropriate BLM office at least 24 hours prior to the scheduled Casing Integrity Test. For wells in Chaves and Roosevelt County, call (505) 234-5972; Lea county (505) 393-3612.

Wells that successfully pass the casing integrity test will be approved for Temporary Abandonment (TA) status for a 12 month period provided by the operator.

1. Submits a subsequent Sundry Notice (Form 3160-5) requesting TA approval.
2. Attaches a clear copy of the original pressure test chart.
3. Provided justification why the well should be temporarily abandoned rather than permanently plugged and abandoned and an estimated date that the well will be returned to beneficial use or plugged and abandoned.
4. Describes the temporary abandonment procedure.

The TA status could be extended without another casing integrity test provided there was no leak-off during the test and the test was witnessed by a BLM representative.

If the well does not pass the casing integrity test, then the operator shall within 30 days submit to BLM for approval one of the following:

1. A procedure to repair the casing so that a TA approval can be granted.
2. A procedure to plug and abandon the well.