

NO. OF COPIES RECEIVED	
DISTRIBUTION	
SANTA FE	
FILE	
U.S.G.S.	
LAND OFFICE	
OPERATOR	

NEW MEXICO OIL CONSERVATION COMMISSION

Form C-103
Supersedes Old
C-102 and C-103
Effective 1-1-65

5a. Indicate Type of Lease
State <input checked="" type="checkbox"/> Fee <input type="checkbox"/>
5. State Oil & Gas Lease No.
B-9380

SUNDRY NOTICES AND REPORTS ON WELLS

(DO NOT USE THIS FORM FOR PROPOSALS TO DRILL OR TO DEEPEN OR PLUG BACK TO A DIFFERENT RESERVOIR.
USE "APPLICATION FOR PERMIT -" (FORM C-101) FOR SUCH PROPOSALS.)

1. OIL WELL <input checked="" type="checkbox"/> GAS WELL <input type="checkbox"/> OTHER <input type="checkbox"/>	7. Unit Agreement Name
2. Name of Operator	8. Farm or Lease Name
TEXACO Inc.	NCT-6
3. Address of Operator	9. Well No.
P. O. Box 728, Hobbs, New Mexico 88240	1
4. Location of Well	10. Field and Pool, or Wildcat
UNIT LETTER N 660 FEET FROM THE South LINE AND 1980 FEET FROM THE West LINE, SECTION 25 TOWNSHIP 10-S RANGE 33-E NMPM.	Irbe Permo Penn
15. Elevation (Show whether DF, RT, GR, etc.)	12. County
4212' DF	Lea

Check Appropriate Box To Indicate Nature of Notice, Report or Other Data

NOTICE OF INTENTION TO:

SUBSEQUENT REPORT OF:

PERFORM REMEDIAL WORK <input type="checkbox"/>	PLUG AND ABANDON <input checked="" type="checkbox"/>	REMEDIAL WORK <input type="checkbox"/>	ALTERING CASING <input type="checkbox"/>
TEMPORARILY ABANDON <input type="checkbox"/>	CHANGE PLANS <input type="checkbox"/>	COMMENCE DRILLING OFNS. <input type="checkbox"/>	PLUG AND ABANDONMENT <input type="checkbox"/>
PULL OR ALTER CASING <input type="checkbox"/>	OTHER <input type="checkbox"/>	CASING TEST AND CEMENT JOBS <input type="checkbox"/>	

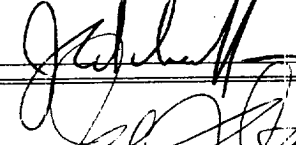
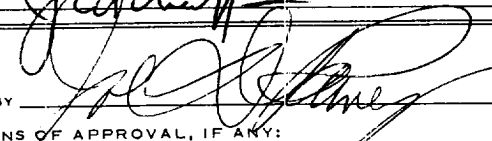
17. Describe Proposed or Completed Operations (Clearly state all pertinent details, and give pertinent dates, including estimated date of starting any proposed work) SEE RULE 1103.

TEXACO Inc. proposes to do the following work on subject well:

1. Pull production equipment.
2. Mud up well bore.
3. Spot 40 sx cement across perforations and up to 9800'.
4. Free Pt 4 1/2" casing, cut and pull (est. 5000').
5. Spot 30 sx cement plug across 4 1/2" stub.
6. Spot 30 sx cement plug at 8 5/8" shoe.
7. Spot 10 sx Cement at Surface.
8. Install 4" dry hole marker extending 4' above ground level.

9. Clean location.

18. I hereby certify that the information above is true and complete to the best of my knowledge and belief.

SIGNED 	TITLE Assistant District Superintendent	DATE 3-24-71
APPROVED BY 	TITLE SUPERVISOR DISTRICT	DATE MAR 26 1971
CONDITIONS OF APPROVAL, IF ANY:		

RECEIVED

MAR 25 1971

**OIL CONSERVATION COMM.
HOBBS, N. M.**