

UNITED STATES
DEPARTMENT OF THE INTERIOR
GEOLOGICAL SURVEY

PERMITTING
(Other Instructions
Reverse Side)

COMPLETION
on re-
98210

Form approved.
Budget Bureau No. 42-R1424.

5. LEASE DESIGNATION AND SERIAL NO.

LC-060521A

6. IF INDIAN, ALLOTTEE OR TRIBE NAME

7. UNIT AGREEMENT NAME

8. FARM OR LEASE NAME
Perry Federal

9. WELL NO.

1

10. FIELD AND POOL, OR WILDCAT

Prairie San Andres, South

11. SEC., T., R., M., OR BLK. AND
SURVEY OR AREA

Sec. 17-T8S-R36E

12. COUNTY OR PARISH

Roosevelt

13. STATE

New Mexico

1. OIL WELL ☒ GAS WELL ☐ OTHER ☐

2. NAME OF OPERATOR
J. M. Huber Corporation

3. ADDRESS OF OPERATOR
1900 Wilco Bldg., Midland, Texas 79701-4480

4. LOCATION OF WELL (Report location clearly and in accordance with any State requirements.*
See also space 17 below.)
At surface

660' FSL, 1980' FEL

14. PERMIT NO.

15. ELEVATIONS (Show whether DF, RT, GR, etc.)

4125' GR

16. Check Appropriate Box To Indicate Nature of Notice, Report, or Other Data

NOTICE OF INTENTION TO:

TEST WATER SHUT-OFF

FRACTURE TREAT

SHOOT OR ACIDIZE

REPAIR WELL

(Other)

PULL OR ALTER CASING

MULTIPLE COMPLETE

ABANDON*

CHANGE PLANS

X

SUBSEQUENT REPORT OF:

WATER SHUT-OFF

FRACTURE TREATMENT

SHOOTING OR ACIDIZING

(Other)

REPAIRING WELL

ALTERING CASING

ABANDONMENT*

(NOTE: Report results of multiple completion on Well
Completion or Recompletion Report and Log form.)

17. DESCRIBE PROPOSED OR COMPLETED OPERATIONS (Clearly state all pertinent details, and give pertinent dates, including estimated date of starting any proposed work. If well is directionally drilled, give subsurface locations and measured and true vertical depths for all markers and zones pertinent to this work.)*

See attached wellbore diagrams showing current status and proposed P&A procedure.

PHONE: (915) 682-3794

18. I hereby certify that the foregoing is true and correct

SIGNED

[Signature]

TITLE

District Production Manager DATE May 24, 1984

(This space for Federal or State office use)

APPROVED BY

[Signature]


TITLE

Area Manager

DATE

5-31-84

CONDITIONS OF APPROVAL, IF ANY:

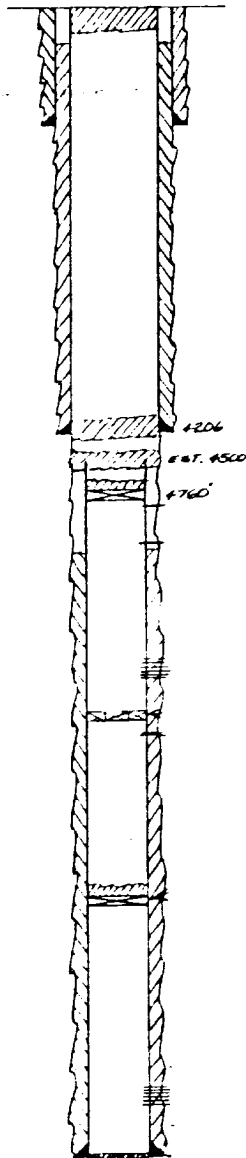

TD: 9703
PBD: 5240'

PROPOSED ABANDONMENT PROCEDURE

Perry Federal No. 1
Roosevelt County, New Mexico

1. Set CIBP in 5 1/2" casing at ~~4760'~~ with 50' cmt on top. (at 4900')
2. Salvage as much 5 1/2" casing as possible. Estimated recovery is 4500'.
3. Spot a 100' (34 cu. ft.) cement plug across 5 1/2" csg. stub. - 4 TAG
4. Spot a 100' (34 cu. ft.) cement plug across 8-5/8" casing shoe at 4206'.
7. Spot a 50' (18 cu. ft.) cement plug in 8-5/8" casing at the surface.
8. Load hole with salt gel between cement plugs.
5. Spot 100' plug from 2700' to 2800' (Base of SALT)
6. Perf @ 2350' & sq. leave 100' plug in csg. (Top of SALT)

PERRY FEDERAL NO. 1
PRAIRIE SAN ANDRES, SOUTH
ROOSEVELT COUNTY, NEW MEXICO

PROPOSED P&A

RECEIVED BY
JUN 01 1984
O. C. D.
ARTESIA, OFFICE

RECEIVED
JUN 4 1984
O.C.D.
HOBBS OFFICE