

UNITED STATES DEPARTMENT OF THE INTERIOR
BUREAU OF LAND MANAGEMENT
P.O. BOX 1980
HOBBS, NEW MEXICO 88240

Expires August 31, 1985

SUNDRY NOTICES AND REPORTS ON WELLS

(Do not use this form for proposals to drill or to deepen or plug back to a different reservoir.
Use "APPLICATION FOR PERMIT—" for such proposals.)

1. OIL WELL <input checked="" type="checkbox"/> GAS WELL <input type="checkbox"/> OTHER <input type="checkbox"/>	7. UNIT AGREEMENT NAME
2. NAME OF OPERATOR MURPHY OPERATING CORPORATION	8. FARM OR LEASE NAME CONE FEDERAL
3. ADDRESS OF OPERATOR P. O. Drawer 2648, Roswell, New Mexico 88202-2648	9. WELL NO. 22
4. LOCATION OF WELL (Report location clearly and in accordance with any State requirements.* See also space 17 below.) At surface 330' FSL & 1980' FWL, Unit Ltr. N, Sec. 27, T7S, R32E	10. FIELD AND POOL, OR WILDCAT Chaveroo San Andres
14. PERMIT NO.	15. ELEVATIONS (Show whether DF, RT, GR, etc.) 4470' GL, 4482' KB
	11. SEC., T., R., M., OR BLK. AND SURVEY OR AREA Sec. 27, T7S, R32E
	12. COUNTY OR PARISH Roosevelt
	13. STATE New Mexico

16. Check Appropriate Box To Indicate Nature of Notice, Report, or Other Data

NOTICE OF INTENTION TO:

TEST WATER SHUT-OFF

☐
☐
☐
☐

PULL OR ALTER CASING

☐
☐
☒
☐

FRACTURE TREAT

MULTIPLE COMPLETION

SHOOT OR ACIDIZE

ABANDON*

REPAIR WELL

CHANGE PLANS

(Other)

SUBSEQUENT REPORT OF:

WATER SHUT-OFF

☐
☐
☐

FRACTURE TREATMENT

SHOOTING OR ACIDIZING

(Other)

REPAIRING WELL

ALTERING CASING

ABANDONMENT*

☐
☐
☐

(NOTE: Report results of multiple completion on Well Completion or Recompletion Report and Log form.)

17. DESCRIBE PROPOSED OR COMPLETED OPERATIONS (Clearly state all pertinent details, and give pertinent dates, including estimated date of starting any proposed work. If well is directionally drilled, give subsurface locations and measured and true vertical depths for all markers and zones pertinent to this work.)*

8 5/8" casing set @ 1885', cemented w/450 sxs., circulated.
4 1/2" casing set @ 4388', cemented w/300 sxs.
Perforation 4238-4270'.

Propose to plug and abandon well in following manner:

1. Set cement plug from 4320-4188'. Tag plug.
2. Cut and pull 4 1/2" casing from approximately 2700-2500'.
3. Set 130' cement plug centered on 4 1/2" casing stub. Tag plug.
4. Set 120' cement plug across 8 5/8" casing 1945-1825'. Tag plug.
5. Set 50' cement plug at surface.
6. Install dry hole marker.

Well will be plugged in accordance with Roswell Resource Area General Requirements for Permanent Abandonment of Wells. BLM will be notified 24 hours prior to initiation of plugging activities.

18. I hereby certify that the foregoing is true and correct

SIGNED

Melinda K. Hickman
Melinda K. Hickman

TITLE Production Supervisor

DATE May 18, 1989


(This space for Federal or State office use)

APPROVED BY

TITLE

CONDITIONS OF APPROVAL, IF ANY:

*See Instructions on Reverse Side

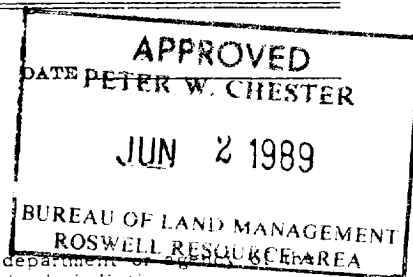

TC

RECEIVED
SEP 12 1989
OCD
HOBBS' OFFICE