

UNITED STATES
DEPARTMENT OF THE INTERIOR
GEOLOGICAL SURVEY

SUBMIT IN TRIPLICATE*
(Other instruction re-
verse side)

Form approved.
Budget Bureau No. 42-R1424.

SUNDRY NOTICES AND REPORTS ON WELLS

(Do not use this form for proposals to drill or to deepen or plug back to a different reservoir.
Use "APPLICATION FOR PERMIT—" for such proposals.)

1. OIL ☒ WELL GAS ☐ WELL OTHER ☐	2. NAME OF OPERATOR Jack L. McClellan and Len Mayer	3. ADDRESS OF OPERATOR P. O. Box 848, Roswell, New Mexico	5. LEASE DESIGNATION AND SERIAL NO. RM-0354976	6. IF INDIAN, ALLOTTEE OR TRIBE NAME	7. UNIT AGREEMENT NAME	8. FARM OR LEASE NAME Oilmore Federal	9. WELL NO. 1	10. FIELD AND POOL, OR WILDCAT	11. SEC., T., R., M., OR BLK. AND SURVEY OR AREA Sec. 34-10S-30E	12. COUNTY OR PARISH Chaves	13. STATE New Mexico
14. PERMIT NO.	15. ELEVATIONS (Show whether DF, RT, GR, etc.) 4112 DF										

16. Check Appropriate Box To Indicate Nature of Notice, Report, or Other Data

NOTICE OF INTENTION TO:

TEST WATER SHUT-OFF	☐	PULL OR ALTER CASING	☐
FRACTURE TREAT	☐	MULTIPLE COMPLETE	☐
SHOOT OR ACIDIZE	☐	ABANDON*	☒
REPAIR WELL	☐	CHANGE PLANS	☐
(Other)	☐		☐

SUBSEQUENT REPORT OF:

WATER SHUT-OFF	☐	REPAIRING WELL	☐
FRACTURE TREATMENT	☐	ALTERING CASING	☐
SHOOTING OR ACIDIZING	☐	ABANDONMENT*	☐
(Other)	☐		☐

(NOTE: Report results of multiple completion on Well Completion or Recompletion Report and Log form.)

17. DESCRIBE PROPOSED OR COMPLETED OPERATIONS (Clearly state all pertinent details, and give pertinent dates, including estimated date of starting any proposed work. If well is directionally drilled, give subsurface locations and measured and true vertical depths for all markers and zones pertinent to this work.)*

Propose to plug and abandon this test as follows:

A pre-existing plug is at 4000'. 9-5/8" casing is set at 3155' and circulated.

Will set 100' plug at base of casing and 10 sx plug at surface and set marker.

Approved subject to the following plugging program:

1. Cover with cement all open perforated intervals. available to this office show open perfs at

3,596' - 3,642'


3,903' - 3,925'

3,992' - 3,998'

The cement plug in each case should come to at least 25 feet above the uppermost perforation.

2. Fill the annulus between plugs and above the uppermost plug with heavy mud.

3. A 25' plug at the surface with an identifying marker.

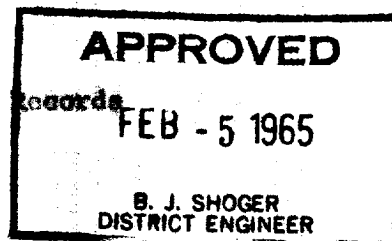

18. I hereby certify that the foregoing is true and correct

SIGNED

Jack L. McClellan

TITLE

Operator

DATE

January 22, 1965

(This space for Federal or State office use)

APPROVED BY

TITLE

DATE

CONDITIONS OF APPROVAL, IF ANY:

NMOCC - ARTESIA
NMOCC - HOOBS
BLM - SANTA FE




*See Instructions on Reverse Side

Instructions

General: This form is designed for submitting proposals to perform certain well operations, and reports of such operations when completed, as indicated, on Federal and Indian lands pursuant to applicable Federal law and regulations, and, if approved or accepted by any State, on all lands in such State, pursuant to applicable State law and regulations. Any necessary special instructions concerning the use of this form and the number of copies to be submitted, particularly with regard to local, area, or regional procedures and practices, either are shown below or will be issued by, or may be obtained from, the local Federal and/or State office.

Item 4: If there are no applicable State requirements, locations of Federal or Indian land should be described in accordance with Federal requirements. Consult local State or Federal office for specific instructions.

Item 17: Proposals to abandon a well and subsequent reports on abandonment should include such special information as is required by local Federal and/or State offices. In addition, such proposals and reports should include reasons for the abandonment; data on any former or present productive zones, or other zones with present significant fluid contents not sealed off by cement or otherwise; depths (top and bottom) and method of placement of cement plugs; mud or other material placed below, between and above plugs; amount, size, method of parting of any casing, liner or tubing pulled and the depth to top of any left in the hole; method of closing top of well; and date well site conditioned for final inspection looking to approval of the abandonment.



887-851 - 50000
887-851 - 1000
887-851 - 1000