

1. OF COPIES RECEIVED	
DISTRIBUTION	
DATE	
BY	
S.G.S.	
AND OFFICE	
OPERATOR	

# NEW MEXICO OIL CONSERVATION COMMISSION

Form C-103  
Supersedes Old  
C-102 and C-103  
Effective 1-1-65

5a. Indicate Type of Lease	
State <input type="checkbox"/>	Fee <input checked="" type="checkbox"/>
5. State Oil & Gas Lease No.	
7. Unit Agreement Name <b>G.C.S.U.</b>	
8. Farm or Lease Name <b>Tract 45</b>	
9. Well No. <b>1</b>	
10. Field and Pool, or Wildcat <b>Caprock Queen</b>	
12. County <b>Chaves</b>	

## SUNDRY NOTICES AND REPORTS ON WELLS (DO NOT USE THIS FORM FOR PROPOSALS TO DRILL OR TO DEEPEN OR PLUG BACK TO A DIFFERENT RESERVOIR. USE APPLICATION FOR PERMIT - "A" (FORM C-131) FOR SUCH PROPOSALS.)

OIL WELL <input type="checkbox"/>	GAS WELL <input type="checkbox"/>	OTHER <input checked="" type="checkbox"/> <b>Water Injection</b>
Name of Operator <b>Cities Service Oil Company</b>		
Address of Operator <b>Box 69 - Hobbs, New Mexico 88240</b>		
Location of Well: UNIT LETTER <b>L</b> , <b>1980</b> FEET FROM TIE <b>South</b> LINE AND <b>660</b> FEET FROM THE <b>West</b> LINE, SECTION <b>11</b> , TOWNSHIP <b>14S</b> , RANGE <b>31E</b> , NMPM.		

15. Elevation (Show whether DF, RT, GR, etc.)

**4519 DF**

16.

Check Appropriate Box To Indicate Nature of Notice, Report or Other Data  
NOTICE OF INTENTION TO:

PERFORM REMEDIAL WORK	<input type="checkbox"/>
TEMPORARILY ABANDON	<input type="checkbox"/>
PULL OR ALTER CASING	<input type="checkbox"/>
OTHER	<input type="checkbox"/>

PLUG AND ABANDON	<input checked="" type="checkbox"/>
CHANGE PLANS	<input type="checkbox"/>

SUBSEQUENT REPORT OF:

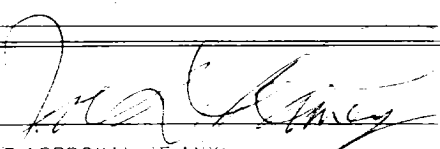
REMEDIAL WORK	<input type="checkbox"/>	ALTERING CASING	<input type="checkbox"/>
COMMENCE DRILLING OPNS.	<input type="checkbox"/>	PLUG AND ABANDONMENT	<input type="checkbox"/>
CASING TEST AND CEMENT JOB	<input type="checkbox"/>		
OTHER	<input type="checkbox"/>		

17. Describe Proposed or Completed Operations (Clearly state all pertinent details, and give pertinent dates, including estimated date of starting any proposed work) SEE RULE 1103.

We propose to plug and abandon the above well in the following manner:

1. Set CI bridge plug in casing just above open hole. (7" set @ 3049' w/1390 sax)
2. Set 25 sx cement plug on top of bridge plug.
3. Load hole with mud laden fluid.
4. Set 10 sack cement surface plug with a 4" dry hole marker.
5. Clean location of all debris and equipment.

18. I hereby certify that the information above is true and complete to the best of my knowledge and belief.

SIGNED	TITLE <b>District Admin. Supervisor</b>	DATE <b>5/4/70</b>
APPROVED BY 	TITLE <b>SUPERVISOR DISTRICT</b>	DATE <b>MAY 7 1970</b>
CONDITIONS OF APPROVAL, IF ANY:		

RECEIVED  
MAY 6 1970  
U.S. DEPARTMENT OF AGRICULTURE