

NO. OF COPIES RECEIVED	
DISTRIBUTION	
SANTA FE	
FILE	
U.S.G.S.	
LAND OFFICE	
OPERATOR	

NEW MEXICO OIL CONSERVATION COMMISSION

Form C-103
Supersedes Old
C-102 and C-103
Effective 1-1-65

5a. Indicate Type of Lease
State <input type="checkbox"/> Fee <input checked="" type="checkbox"/>
5. State Oil & Gas Lease No.

SUNDRY NOTICES AND REPORTS ON WELLS

(DO NOT USE THIS FORM FOR PROPOSALS TO DRILL OR TO DEEPEN OR PLUG BACK TO A DIFFERENT RESERVOIR.
USE "APPLICATION FOR PERMIT -" (FORM C-101) FOR SUCH PROPOSALS.)

1. OIL WELL <input checked="" type="checkbox"/> GAS WELL <input type="checkbox"/> OTHER <input type="checkbox"/>	7. Unit Agreement Name D. Q. S. U.
2. Name of Operator Cities Service Oil Company	8. Farm or Lease Name Tract 47
3. Address of Operator Box 69 - Hobbs, New Mexico 88240	9. Well No. 3
4. Location of Well UNIT LETTER E 1980 FEET FROM THE North LINE AND 660 FEET FROM THE West LINE, SECTION 11 TOWNSHIP 14S RANGE 31E NMPM.	10. Field and Pool, or Wildcat Caprock Queen
15. Elevation (Show whether DF, RT, GR, etc.) 4409 Gr	12. County Chaves

16.

Check Appropriate Box To Indicate Nature of Notice, Report or Other Data

NOTICE OF INTENTION TO:

SUBSEQUENT REPORT OF:

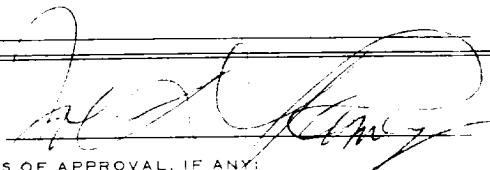

PERFORM REMEDIAL WORK <input type="checkbox"/>	PLUG AND ABANDON <input checked="" type="checkbox"/>	REMEDIAL WORK <input type="checkbox"/>	ALTERING CASING <input type="checkbox"/>
TEMPORARILY ABANDON <input type="checkbox"/>	CHANGE PLANS <input type="checkbox"/>	COMMENCE DRILLING OPNS. <input type="checkbox"/>	PLUG AND ABANDONMENT <input type="checkbox"/>
PULL OR ALTER CASING <input type="checkbox"/>	OTHER <input type="checkbox"/>	CASING TEST AND CEMENT JOB <input type="checkbox"/>	
		OTHER <input type="checkbox"/>	

17. Describe Proposed or Completed Operations (Clearly state all pertinent details, and give pertinent dates, including estimated date of starting any proposed work) SEE RULE 1103.

We propose to plug and abandon the above well in the following manner:

1. Set CI bridge plug in casing just above open hole. (7" set @ 3046 w/125 sxs)
2. Set 25 sx. cement plug on top of bridge plug.
3. Load hole with mud laden fluid.
4. Set 10 sack cement surface plug with a 4" dry hole marker.
5. Clean location of all debris and equipment.

18. I hereby certify that the information above is true and complete to the best of my knowledge and belief.

SIGNED 	TITLE District Admin. Supervisor	DATE 5/4/70
APPROVED BY 	TITLE District Admin. Supervisor	DATE MAY 7 1970
CONDITIONS OF APPROVAL, IF ANY:		

RECEIVED

MAY 6 1970

U.S. AIR FORCE
MILITARY COMMISSION