

NO. OF COPIES RECEIVED	
DISTRIBUTION	
SANTA FE	
FILE	
U.S.G.S.	
LAND OFFICE	
OPERATOR	

NEW MEXICO OIL CONSERVATION COMMISSION

Form C-103  
Supersedes Old  
C-102 and C-103  
Effective 1-1-65

5a. Indicate Type of Lease State <input checked="" type="checkbox"/> Fee <input type="checkbox"/>
5. State Oil & Gas Lease No. -
7. Unit Agreement Name <b>B. Q. S. U.</b>
8. Farm or Lease Name <b>Tract 30</b>
9. Well No. <b>1</b>
10. Field and Pool, or Wildcat <b>Caprock Queen</b>
12. County <b>Chaves</b>

**SUNDRY NOTICES AND REPORTS ON WELLS**  
(DO NOT USE THIS FORM FOR PROPOSALS TO DRILL OR TO DEEPEN OR PLUG BACK TO A DIFFERENT RESERVOIR. USE "APPLICATION FOR PERMIT -" (FORM C-101) FOR SUCH PROPOSALS.)

1. OIL WELL <input checked="" type="checkbox"/> GAS WELL <input type="checkbox"/> OTHER <input type="checkbox"/>
2. Name of Operator <b>Cities Service Oil Company</b>
3. Address of Operator <b>Box 69 - Hobbs, New Mexico 88240</b>
4. Location of Well UNIT LETTER <b>0</b> <b>660</b> FEET FROM THE <b>South</b> LINE AND <b>1980</b> FEET FROM THE <b>East</b> LINE, SECTION <b>16</b> TOWNSHIP <b>14S</b> RANGE <b>31E</b> NMPM.
15. Elevation (Show whether DF, RT, GR, etc.) -

16. Check Appropriate Box To Indicate Nature of Notice, Report or Other Data

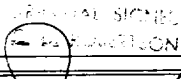
NOTICE OF INTENTION TO:	SUBSEQUENT REPORT OF:
PERFORM REMEDIAL WORK <input type="checkbox"/>	REMEDIAL WORK <input type="checkbox"/>
TEMPORARILY ABANDON <input type="checkbox"/>	COMMENCE DRILLING OPNS. <input type="checkbox"/>
PULL OR ALTER CASING <input type="checkbox"/>	CASING TEST AND CEMENT JOBS <input type="checkbox"/>
OTHER <input type="checkbox"/>	OTHER <input type="checkbox"/>
PLUG AND ABANDON <input checked="" type="checkbox"/>	ALTERING CASING <input type="checkbox"/>
CHANGE PLANS <input type="checkbox"/>	PLUG AND ABANDONMENT <input type="checkbox"/>

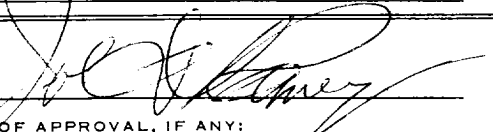
17. Describe Proposed or Completed Operations (Clearly state all pertinent details, and give pertinent dates, including estimated date of starting any proposed work) SEE RULE 1103.

**We propose to plug and abandon the above well in the following manner:**

1. Set CI bridge plug in casing just above open hole. (5½" set @ 2888 w/100 sxs)
2. Set 25 sack cement plug on top of bridge plug.
3. Load hole with mud laden fluid.
4. Set 10 sack cement surface plug with a 4" dry hole marker.
5. Clean location of all debris and equipment.

18. I hereby certify that the information above is true and complete to the best of my knowledge and belief.

SIGNED  TITLE **District Admin. Supervisor** DATE **5/4/70**

APPROVED BY  TITLE **SUPERVISOR DISTRICT** DATE **MAY 7 1970**

CONDITIONS OF APPROVAL, IF ANY:

U.S. DEPARTMENT OF COMMERCE  
OFFICE OF THE SECRETARY

MAY 6 1970

RECEIVED

NY