

UNITED STATES  
DEPARTMENT OF THE INTERIOR  
BUREAU OF LAND MANAGEMENT

N. M. OIL CONS. COMMISSION  
P. O. BOX 1980  
HOBBS, NEW MEXICO 88240

FORM APPROVED  
Budget Bureau No. 1004-0135  
Expires: March 31, 1993

SUNDRY NOTICES AND REPORTS ON WELLS

Do not use this form for proposals to drill or to deepen or reentry to a different reservoir.  
Use "APPLICATION FOR PERMIT—" for such proposals

SUBMIT IN TRIPLICATE

1. Type of Well  
☒ Oil Well ☐ Gas Well ☐ Other

2. Name of Operator

YATES PETROLEUM CORPORATION

(505) 748-1471

3. Address and Telephone No.

105 South 4th St., Artesia, NM 88210

4. Location of Well (Footage, Sec., T., R., M., or Survey Description)

2108' FNL & 734' FEL of Section 24-T8S-R32E (Unit H, SENE)

5. Lease Designation and Serial No.

NM-82906

6. If Indian, Allottee or Tribe Name

7. If Unit or CA, Agreement Designation

8. Well Name and No.

Shell James A00 Federal #1

9. API Well No.

30-005-10120

10. Field and Pool, or Exploratory Area

Und. Chaveroo San Andres

11. County or Parish, State

Chaves Co., NM

CHECK APPROPRIATE BOX(S) TO INDICATE NATURE OF NOTICE, REPORT, OR OTHER DATA

TYPE OF SUBMISSION

- ☒ Notice of Intent  
☐ Subsequent Report  
☐ Final Abandonment Notice

TYPE OF ACTION

- ☒ Abandonment  
☐ Recompletion  
☐ Plugging Back  
☐ Casing Repair  
☐ Altering Casing  
☐ Other
- ☐ Change of Plans  
☐ New Construction  
☐ Non-Routine Fracturing  
☐ Water Shut-Off  
☐ Conversion to Injection  
☐ Dispose Water

(Note: Report results of multiple completion on Well Completion or Recompletion Report and Log form 1)

13. Describe Proposed or Completed Operations (Clearly state all pertinent details, and give pertinent dates, including estimated date of starting any proposed work. If well is directionally drilled, give subsurface locations and measured and true vertical depths for all markers and zones pertinent to this work.)

Propose to plug and abandon well as follows:

1. Load hole with plugging mud.
2. Set a CIBP at 4200' and cap with 35' of cement.
3. Cut and pull 5-1/2" casing. Top of cement at 3750'±.
4. Spot a cement plug from 50' below the top of the 5-1/2" casing stub to 3500'. NOTE: Top of San Andres at 3543'. WOC. Tag plug.
5. Spot a 100' cement plug from 465-365' (11-3/4" casing shoe at 413').
6. Spot a 10 sack cement plug at surface.
7. Install regulation abandonment marker.

NOTIFY BLM-ROSWELL (505-624-1790) 24 HOURS PRIOR TO COMMENCING PLUGGING OPERATIONS

14. I hereby certify that the foregoing is true and correct


Signed Peter W. Chester  
(This space for Federal or State office use)

Title Production Clerk

Date June 12, 1995

Approved by \_\_\_\_\_  
Conditions of approval, if any:

Title \_\_\_\_\_

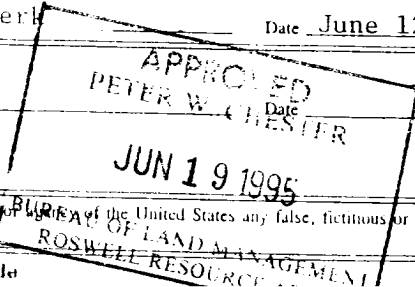

Title 18 U.S.C. Section 1001, makes it a crime for any person knowingly and willfully to make to any department or agency of the United States any false, fictitious or fraudulent statements or representations as to any matter within its jurisdiction.

\*See Instruction on Reverse Side

**RECEIVED**

JUL 20 1998  
OCD HUBBS  
OFFICE