

Form 3160-5  
(June 1990)

UNITED STATES  
DEPARTMENT OF THE INTERIOR  
BUREAU OF LAND MANAGEMENT

FORM APPROVED  
Budget Bureau No. 1004-0135  
Expires: March 31, 1993

**SUNDRY NOTICES AND REPORTS ON WELLS**

Do not use this form for proposals to drill or to deepen or reentry to a different reservoir.  
Use "APPLICATION FOR PERMIT—" for such proposals

**SUBMIT IN TRIPLICATE**

1. Type of Well  
☐ Oil Well ☐ Gas Well ☒ Other SWD

2. Name of Operator  
YATES PETROLEUM CORPORATION (505) 748-1471

3. Address and Telephone No.  
105 South 4th St., Artesia, NM 88210

4. Location of Well (Footage, Sec., T., R., M., or Survey Description)  
1650' FNL & 330' FEL of Section 10-T8S-R33E (Unit H, SENE)

5. Lease Designation and Serial No.  
NM-31211

6. If Indian, Allottee or Tribe Name

7. If Unit or CA, Agreement Designation

8. Well Name and No.  
Sun UW Federal #2

9. API Well No.  
30-005-20925 20884

10. Field and Pool, or Exploratory Area  
SWD, Chaves San Andres

11. County or Parish, State  
Chaves Co., NM

12. CHECK APPROPRIATE BOX(s) TO INDICATE NATURE OF NOTICE, REPORT, OR OTHER DATA

TYPE OF SUBMISSION	TYPE OF ACTION
<input checked="" type="checkbox"/> Notice of Intent	<input checked="" type="checkbox"/> Abandonment
<input type="checkbox"/> Subsequent Report	<input type="checkbox"/> Recompletion
<input type="checkbox"/> Final Abandonment Notice	<input type="checkbox"/> Plugging Back
	<input type="checkbox"/> Casing Repair
	<input type="checkbox"/> Altering Casing
	<input type="checkbox"/> Other
	<input type="checkbox"/> Change of Plans
	<input type="checkbox"/> New Construction
	<input type="checkbox"/> Non-Routine Fracturing
	<input type="checkbox"/> Water Shut-Off
	<input type="checkbox"/> Conversion to Injection
	<input type="checkbox"/> Dispose Water

(Note: Report results of multiple completion on Well Completion or Recompletion Report and Log form.)

13. Describe Proposed or Completed Operations (Clearly state all pertinent details, and give pertinent dates, including estimated date of starting any proposed work. If well is directionally drilled, give subsurface locations and measured and true vertical depths for all markers and zones pertinent to this work.)\*

Propose to plug and abandon well as follows:

1. Set CIBP at 4150' and cap with 35' of cement.
2. Stretch casing to find freepoint. Cut and pull 50' above.
3. TIH with 2-3/8" tubing. Spot a 35 sack cement plug across 4-1/2" stub. WOC. Tag plug.
4. Load hole with plugging mud.
5. Spot a 35 sack cement plug at 1500'.
6. Spot a 50 sack cement plug from 415' <sup>436'-335'</sup> across 10-3/4" shoe. WOC. Tag plug.
7. Spot at least a 100' cement plug at surface.
8. Install regulation abandonment marker.

NOTIFY BLM - ROSWELL (505-624-1790) 24 HOURS PRIOR TO COMMENCING PLUGGING OPERATIONS.

14. I hereby certify that the foregoing is true and correct


Signed Rusty Klein

Title Production Clerk

(This space for Federal or State office use)

Approved by \_\_\_\_\_  
Conditions of approval, if any:

Title \_\_\_\_\_

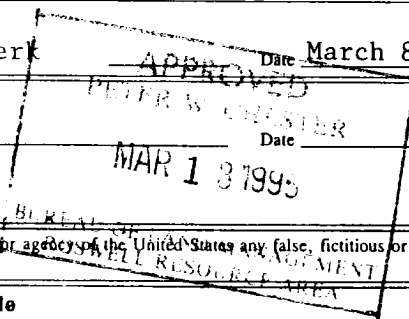

Title 18 U.S.C. Section 1001, makes it a crime for any person knowingly and willfully to make to any department or agency of the United States any false, fictitious or fraudulent statements or representations as to any matter within its jurisdiction.

\*See Instruction on Reverse Side