

NO. OF COPIES RECEIVED	
DISTRIBUTION	
SANTA FE	
FILE	
U.S.G.S.	
LAND OFFICE	
OPERATOR	

NEW MEXICO OIL CONSERVATION COMMISSION

Form C-103
Supersedes Old
C-102 and C-103
Effective 1-1-65

5a. Indicate Type of Lease State <input checked="" type="checkbox"/> Fee <input type="checkbox"/>
5. State Oil & Gas Lease No. B-10973

SUNDRY NOTICES AND REPORTS ON WELLS (DO NOT USE THIS FORM FOR PROPOSALS TO DRILL OR TO DEEPEN OR PLUG BACK TO A DIFFERENT RESERVOIR. USE "APPLICATION FOR PERMIT -" (FORM C-101) FOR SUCH PROPOSALS.)

1. OIL WELL <input type="checkbox"/> GAS WELL <input type="checkbox"/> OTHER <input checked="" type="checkbox"/> Water Injection	7. Unit Agreement Name North Caprock Queen Unit 2
2. Name of Operator Anadarko Production Co.	8. Farm or Lease Name Track #13
3. Address of Operator P.O. Box 647 Artesia, New Mexico 88210	9. Well No. #1
4. Location of Well UNIT LETTER D 660 FEET FROM THE North LINE AND 660 FEET FROM THE West LINE, SECTION 7 TOWNSHIP 13-S RANGE 32-E NMPM.	10. Field and Pool, or Wildcat Caprock Queen
15. Elevation (Show whether DF, RT, GR, etc.) 4386 GL	12. County Chaves

Check Appropriate Box To Indicate Nature of Notice, Report or Other Data NOTICE OF INTENTION TO: SUBSEQUENT REPORT OF:

PERFORM REMEDIAL WORK <input type="checkbox"/>	PLUG AND ABANDON <input checked="" type="checkbox"/>	REMEDIAL WORK <input type="checkbox"/>	ALTERING CASING <input type="checkbox"/>
TEMPORARILY ABANDON <input type="checkbox"/>	CHANGE PLANS <input type="checkbox"/>	COMMENCE DRILLING OPNS. <input type="checkbox"/>	PLUG AND ABANDONMENT <input type="checkbox"/>
PULL OR ALTER CASING <input type="checkbox"/>	OTHER <input type="checkbox"/>	CASING TEST AND CEMENT JOB <input type="checkbox"/>	

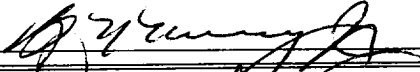

17. Describe Proposed or Completed Operations (Clearly state all pertinent details, and give pertinent dates, including estimated date of starting any proposed work) SEE RULE 1103.

Intend to plug and abandon well as follows:

1. Pull tubing and packer.
2. Set cast iron bridge plug at base 4 1/2" liner approximately 3000'.
3. Spot 25 foot cement plug on top of bridge plug.
4. Knock off oil string at free point, approximately 1200'.
5. Set 25 sack cement plug at casing cut off point.
6. Set 10 sack cement plug at surface.
7. Set surface marker.
8. Remove all equipment and clean up location.

25 sacks in & out of surface csg. shoe
Heavy mud between all plugs

18. I hereby certify that the information above is true and complete to the best of my knowledge and belief.

SIGNED 	TITLE Secretary Agent	DATE 10-28-71
APPROVED BY 	TITLE SUPERVISOR DISTRICT I	DATE NOV 8 1971
CONDITIONS OF APPROVAL, IF ANY:		

RECEIVED

MAR 6 1971

OIL CONSERVATION COM. 1.
BUREAU, D. D.