


NO. OF COPIES RECEIVED	
DISTRIBUTION	
SANTA FE	
FILE	
U.S.G.S.	
LAND OFFICE	
OPERATOR	

NEW MEXICO OIL CONSERVATION COMMISSION

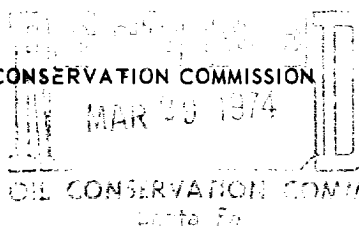

Form C-103
Supersedes Old
C-102 and C-103
Effective 1-1-65

5a. Indicate Type of Lease
State ☒ Fee ☐

5. State Oil & Gas Lease No.
E-2109

SUNDRY NOTICES AND REPORTS ON WELLS (DO NOT USE THIS FORM FOR PROPOSALS TO DRILL OR TO DEEPEN OR PLUG BACK TO A DIFFERENT RESERVOIR. USE "APPLICATION FOR PERMIT -" (FORM C-101) FOR SUCH PROPOSALS.)

1. OIL WELL <input checked="" type="checkbox"/> GAS WELL <input type="checkbox"/> OTHER <input type="checkbox"/>	7. Unit Agreement Name
2. Name of Operator BLACKROCK OIL COMPANY	8. Farm or Lease Name State CY
3. Address of Operator 1701 Cotton Flat Road, Midland, Texas 79701	9. Well No. 1
4. Location of Well UNIT LETTER M 660 FEET FROM THE South LINE AND 612 FEET FROM THE West LINE, SECTION 30 TOWNSHIP 12-S RANGE 34-E NMPM.	10. Field and Pool, or Wildcat Hightower East Lwr. Penn
15. Elevation (Show whether DF, RT, GR, etc.) 4229' R.D.B.	12. County Lea

16. Check Appropriate Box To Indicate Nature of Notice, Report or Other Data

NOTICE OF INTENTION TO:		SUBSEQUENT REPORT OF:	
PERFORM REMEDIAL WORK <input type="checkbox"/>	PLUG AND ABANDON <input checked="" type="checkbox"/>	REMEDIAL WORK <input type="checkbox"/>	ALTERING CASING <input type="checkbox"/>
TEMPORARILY ABANDON <input type="checkbox"/>	CHANGE PLANS <input type="checkbox"/>	COMMENCE DRILLING OPNS. <input type="checkbox"/>	PLUG AND ABANDONMENT <input type="checkbox"/>
PULL OR ALTER CASING <input type="checkbox"/>	OTHER <input type="checkbox"/>	CASING TEST AND CEMENT JOBS <input type="checkbox"/>	

17. Describe Proposed or Completed Operations (Clearly state all pertinent details, and give pertinent dates, including estimated date of starting any proposed work) SEE RULE 1103.

- 1) Set Cast Iron Bridge Plug @ 9230', dump 35' cement on top.
- 2) Cut 5 1/2" casing @ 2500', spot 100' cement plug, lay down 5 1/2" casing.
- 3) Cut 8 5/8" casing @ 2300', spot 100' cement plug.
- 4) Pull 8 5/8" casing to 2130', spot 100' cement plug.
- 5) Pull 8 5/8" casing to 410' (Bottom of 13 3/8" surface casing) spot 100' cement plug.
- 6) Lay down all 8 5/8" casing.
- 7) Dump 10 sxs. cement @ surface, install ~~mark~~ marker.

THE REMEDIAL WORK MUST BE NOTICED 24 HOURS PRIOR TO THE BEGINNING OF PLUGGING OPERATIONS FOR THE C-103 TO BE APPROVED.

18. I hereby certify that the information above is true and complete to the best of my knowledge and belief.

SIGNED *O. D. Butler* TITLE **O. D. Butler, President** DATE **March 25, 1974**

APPROVED BY _____ TITLE _____ DATE _____

CONDITIONS OF APPROVAL, IF ANY: