

NO. OF COPIES RECEIVED	
DISTRIBUTION	
SANTA FE	
FILE	
U.S.G.S.	
LAND OFFICE	
OPERATOR	

# NEW MEXICO OIL CONSERVATION COMMISSION

Form C-103  
Supersedes Old  
C-102 and C-103  
Effective 1-1-65

5a. Indicate Type of Lease State <input checked="" type="checkbox"/> Fee <input type="checkbox"/>
5. State Oil & Gas Lease No. <b>E-1027</b>
7. Unit Agreement Name -
8. Farm or Lease Name <b>New Mexico "CZ" State</b>
9. Well No. <b>2</b>
10. Field and Pool, or Wildcat <b>Ranger Lake (Pennsylvanian)</b>
12. County <b>Lea</b>

## SUNDRY NOTICES AND REPORTS ON WELLS

(DO NOT USE THIS FORM FOR PROPOSALS TO DRILL OR TO DEEPEN OR PLUG BACK TO A DIFFERENT RESERVOIR. USE "APPLICATION FOR PERMIT -" (FORM C-101) FOR SUCH PROPOSALS.)

1. OIL WELL <input checked="" type="checkbox"/> GAS WELL <input type="checkbox"/> OTHER- <input type="checkbox"/>
2. Name of Operator <b>TEXACO Inc.</b>
3. Address of Operator <b>P. O. Box 728, Hobbs, New Mexico 88240</b>
4. Location of Well UNIT LETTER <b>H</b> , <b>1980</b> FEET FROM THE <b>North</b> LINE AND <b>660</b> FEET FROM THE <b>East</b> LINE, SECTION <b>14</b> TOWNSHIP <b>12-S</b> RANGE <b>34-E</b> NMPM.

15. Elevation (Show whether DF, RT, GR, etc.) <b>4152' (D.F.)</b>
--

16. Check Appropriate Box To Indicate Nature of Notice, Report or Other Data  
NOTICE OF INTENTION TO: SUBSEQUENT REPORT OF:

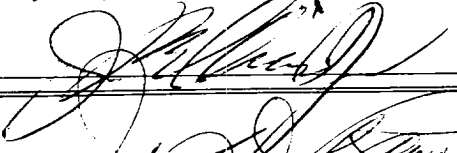

PERFORM REMEDIAL WORK <input type="checkbox"/>	PLUG AND ABANDON <input checked="" type="checkbox"/>	REMEDIAL WORK <input type="checkbox"/>	ALTERING CASING <input type="checkbox"/>
TEMPORARILY ABANDON <input type="checkbox"/>	CHANGE PLANS <input type="checkbox"/>	COMMENCE DRILLING OPNS. <input type="checkbox"/>	PLUG AND ABANDONMENT <input type="checkbox"/>
PULL OR ALTER CASING <input type="checkbox"/>	OTHER <input type="checkbox"/>	CASING TEST AND CEMENT JOB <input type="checkbox"/>	OTHER <input type="checkbox"/>

17. Describe Proposed or Completed Operations (Clearly state all pertinent details, and give pertinent dates, including estimated date of starting any proposed work) SEE RULE 1103.

## TEXACO Proposes To Do The Following Work On Subject Well

1. No tubing in Well. Mud up hole.
2. Run 2 3/8" tubing and spot 40 Sx. cement plug from 9880' - 10,305'.
3. Pull tubing and cut off 4 1/2" O.D. Casing @ approx. 4200' and pull.
4. Spot 25 Sx. cement plug 50' below and 50' above cut off.
5. Spot 10 Sx. cement plug @ surface.
6. Set 4" dry hole marker extending 4' above ground level, clean location, and abandon.

18. I hereby certify that the information above is true and complete to the best of my knowledge and belief.

SIGNED 	TITLE <b>Assistant District Superintendent</b>	DATE <b>October 15, 1969</b>
APPROVED BY 	TITLE	DATE <b>OCT 16 1969</b>
CONDITIONS OF APPROVAL, IF ANY:		