

UNITED STATES
DEPARTMENT OF THE INTERIOR
BUREAU OF LAND MANAGEMENT

SUBMIT IN THE
(Other Instruction
Reverse Side)

DATE
ON

LEASE DESIGNATION AND SERIAL NO.

10-029410A
IF INDIAN, ALLOTTEE OR TRIBE NAME

SUNDRY NOTICES AND REPORTS ON WELLS

(Do not use this form for proposals to drill or to deepen or plug back to a different reservoir.
Use "APPLICATION FOR PERMIT" for such proposals.)

1. OIL WELL ☐ GAS WELL ☐ OTHER ☒ Injection
2. NAME OF OPERATOR Conoco Inc.
3. ADDRESS OF OPERATOR P.O. Box 460 - Hobbs, NM 88240
4. LOCATION OF WELL (Report location clearly and in accordance with any State requirements.
See also space 17 below.)
At surface 1980 660
1480' FSL & 330' FWL
Unit 2
14. PERMIT NO. 30-025-00755
15. ELEVATIONS (Show whether OF, RT, GR, etc.)

7. UNIT AGREEMENT NAME MCA Unit Sly 2
8. FARM OR LEASE NAME
9. WELL NO. #169
10. FIELD AND POOL, OR WILDCAT Malimar (G-SA)
11. SEC., T., R., M., OR BLK. AND SURVEY OR AREA
12. COUNTY OR PARISH Lea
13. STATE NM
Sec. 29 T17S R32E

16. Check Appropriate Box To Indicate Nature of Notice, Report, or Other Data

NOTICE OF INTENTION TO:

TEST WATER SHUT-OFF ☐ PULL OR ALTER CASING ☐
FRACTURE TREAT ☐ MULTIPLE COMPLETE ☐
SHOOT OR ACIDIZE ☐ ABANDON* ☐
REPAIR WELL ☐ CHANGE PLANS ☐
(Other) Modify Injection Profile ☒

SUBSEQUENT REPORT OF:

WATER SHUT-OFF ☐ REPAIRING WELL ☐
FRACTURE TREATMENT ☐ ALTERING CASING ☐
SHOOTING OR ACIDIZING ☐ ABANDONMENT* ☐
(Other) ☐

(NOTE: Report results of multiple completion on Well Completion or Recompletion Report and Log form.)

17. DESCRIBE PROPOSED OR COMPLETED OPERATIONS (Clearly state all pertinent details, and give pertinent dates, including estimated date of starting any proposed work. If well is directionally drilled, give subsurface locations and measured and true vertical depths for all markers and zones pertinent to this work.)

We propose to modify the profile on MCA #169 by: Killing well w/weighted fluid. Shut off a thin layer in the Hayburg 6th zone w/a phenolic gel. Pump scale converter in the L San Andres 7th and San Andres 9th zones. Run injection equip. Acidize. Return to water injection. Run step-rate test. Convert to CO₂ injection. See attached schematic.

18. I hereby certify that the foregoing is true and correct

SIGNED

H.A. Ingram

TITLE Conservation Coordinator

DATE

5/4/90

(This space for Federal or State office use)

APPROVED BY

CONDITIONS OF APPROVAL, IF ANY:

TITLE

DATE

5 24 90


(3)OCD

*See Instructions on Reverse Side

MCA # 169

WELLBORE SKETCH

UPDATED: 6/6/88

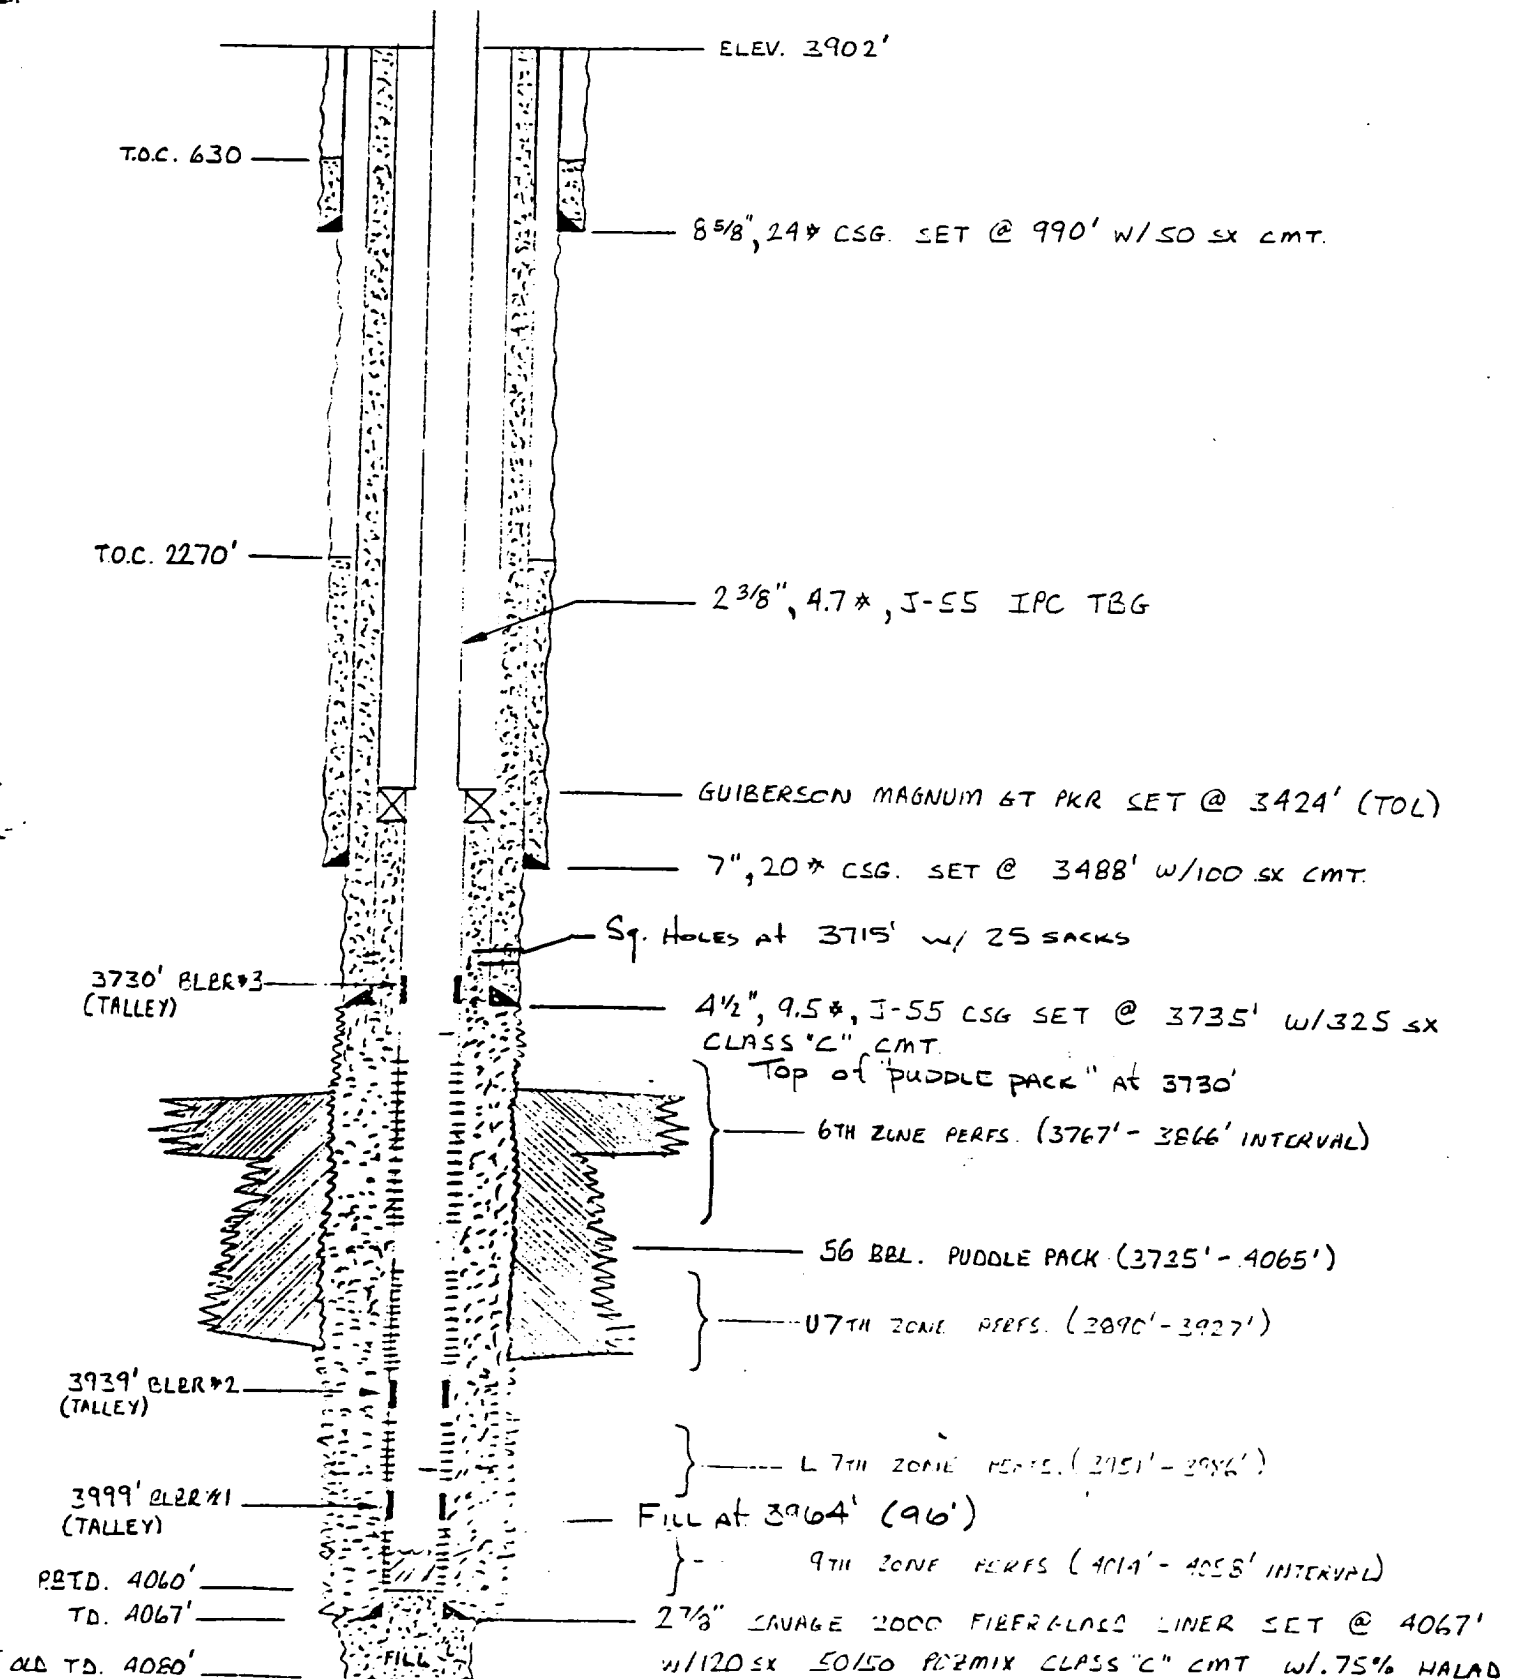

NOTE: COULD BE OPEN HOLE BRIDGE PLUGS IN THE HOLE BELOW T.D. THERE COULD ALSO BE BRIDGE PLUG PIECES IN THE SHOT HOLE