

UNITED STATES
DEPARTMENT OF THE INTERIOR
GEOLOGICAL SURVEY

SUBMIT IN TRIPLICATE*
(Other instructions
reverse side)

Form approved.
Budget Bureau No. 42-R1424.

5. LEASE DESIGNATION AND SERIAL NO.

LC-029405(a)

6. IF INDIAN, ALLOTTEE OR TRIBE NAME

SUNDRY NOTICES AND REPORTS ON WELLS

(Do not use this form for proposals to drill or to deepen or plug back to a different reservoir.
Use "APPLICATION FOR PERMIT—" for such proposals.)

1. OIL WELL ☐ GAS WELL ☐ OTHER <u>Water Injection</u>	7. UNIT AGREEMENT NAME <u>MCA</u>
2. NAME OF OPERATOR <u>Continental Oil Company</u>	8. FARM OR LEASE NAME <u>MCA Unit 1</u>
3. ADDRESS OF OPERATOR <u>P. O. Box 460, Hobbs, NM 88240</u>	9. WELL NO. <u>59</u>
4. LOCATION OF WELL (Report location clearly and in accordance with any State requirements.* See also space 17 below.) At surface <u>1980' FNL & 1980' FWL of Sec. 20.</u>	10. FIELD AND POOL, OR WILDCAT <u>Maj. G-56 Region</u>
14. PERMIT NO.	11. SEC., T., R., M., OR BLE, AND SURVEY OR AREA <u>Sec. 20 T-17S R-32E</u>
15. ELEVATIONS (Show whether DF, RT, GR, etc.) <u>3982' DF</u>	12. COUNTY OR PARISH <u>Lea</u>
	13. STATE <u>NM</u>

18. Check Appropriate Box To Indicate Nature of Notice, Report, or Other Data

NOTICE OF INTENTION TO:

TEST WATER SHUT-OFF	☐	PULL OR ALTER CASING	☐
FRACTURE TREAT	☒	MULTIPLE COMPLETE	☐
SHOOT OR ACIDIZE	☒	ABANDON*	☐
REPAIR WELL	☐	CHANGE PLANS	☒
(Other) <u>Run 4 1/2" Csg.</u>			

SUBSEQUENT REPORT OF:

WATER SHUT-OFF	☐	REPAIRING WELL	☐
FRACTURE TREATMENT	☐	ALTERING CASING	☐
SHOOTING OR ACIDIZING	☐	ABANDONMENT*	☐
(Other)			

(Note: Report results of multiple completion on Well Completion or Recompletion Report and Log form.)

17. DESCRIBE PROPOSED OR COMPLETED OPERATIONS (Clearly state all pertinent details, and give pertinent dates, including estimated date of starting any proposed work. If well is directionally drilled, give subsurface locations and measured and true vertical depths for all markers and zones pertinent to this work.)*

It is proposed to:

- 1) Run 4 1/2" Csg. to 3735' and cement w/300 sacks.
- 2) Run cement band and GR. collar logs.
- 3) Perf. 4 1/2" Csg. w/1 JSFP @ 3,669', 3,673', 3,677', 3,681', 3,685', & 3,689'.
- 4) Acidizing perfor w/1000 gals. HCL-NE acid
- 5) Proc. perfor w/10,000 tubs fresh water & 20,000# sand.
- 6) Clean out to T.O.
- 7) Return well to injection

18. I hereby certify that the foregoing is true and correct


SIGNED [Signature]
(This space for Federal or State office use)

TITLE Admin. Supervisor

DATE 8-24-73

APPROVED BY
CONDITIONS OF APPROVAL, IF ANY:

TITLE

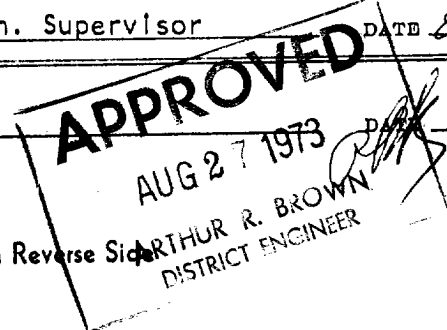

*See Instructions on Reverse Side

RECEIVED

RECEIVED

THE CONSERVATION COM.
HUBBS, R. M.