

NO. OF COPIES RECEIVED		
DISTRIBUTION		
SANTA FE		
FILE		
U.S.G.S.		
LAND OFFICE		
OPERATOR		

NEW MEXICO OIL CONSERVATION COMMISSION

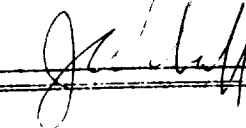
Form C-103
Supersedes Old
C-102 and C-103
Effective 1-1-65

SUNDRY NOTICES AND REPORTS ON WELLS <small>(DO NOT USE THIS FORM FOR PROPOSALS TO DRILL OR TO RE-ENTER OR PLUG BACK TO A DIFFERENT RESERVOIR. USE "APPLICATION FOR PERMIT - A" (FORM C-101) FOR SUCH PROPOSALS.)</small>		5a. Indicate Type of Lease State <input checked="" type="checkbox"/> Fee <input type="checkbox"/>												
1. OIL WELL <input checked="" type="checkbox"/> GAS WELL <input type="checkbox"/> OTHER <input type="checkbox"/>		5. State Oil & Gas Lease No. B-1258-1												
2. Name of Operator TEXACO Inc.		7. Unit Agreement Name -												
3. Address of Operator P.O. Box 728, Hobbs, New Mexico 88240		8. Farm or Lease Name New Mexico "AE" State												
4. Location of Well UNIT LETTER H 210 FEET FROM THE North LINE AND 330 FEET FROM THE West LINE, SECTION 11 TOWNSHIP 18-S RANGE 34-E NMPM.		9. Well No. 8												
15. Elevation (Show whether DF, RT, GR, etc.) 3998' (GL)		10. Field and Pool, or Wildcat Vacuum Abo Reef												
12. County Lea														
16. Check Appropriate Box To Indicate Nature of Notice, Report or Other Data NOTICE OF INTENTION TO: <table border="0"> <tr> <td>PERFORM REMEDIAL WORK <input type="checkbox"/></td> <td>PLUG AND ABANDON <input checked="" type="checkbox"/></td> <td>REMEDIAL WORK <input type="checkbox"/></td> <td>ALTERING CASING <input type="checkbox"/></td> </tr> <tr> <td>TEMPORARILY ABANDON <input type="checkbox"/></td> <td>CHANGE PLANS <input type="checkbox"/></td> <td>COMMENCE DRILLING OPNS. <input type="checkbox"/></td> <td>PLUG AND ABANDONMENT <input type="checkbox"/></td> </tr> <tr> <td>PULL OR ALTER CASING <input type="checkbox"/></td> <td>OTHER <input type="checkbox"/></td> <td>CASING TEST AND CEMENT JOBS <input type="checkbox"/></td> <td></td> </tr> </table>			PERFORM REMEDIAL WORK <input type="checkbox"/>	PLUG AND ABANDON <input checked="" type="checkbox"/>	REMEDIAL WORK <input type="checkbox"/>	ALTERING CASING <input type="checkbox"/>	TEMPORARILY ABANDON <input type="checkbox"/>	CHANGE PLANS <input type="checkbox"/>	COMMENCE DRILLING OPNS. <input type="checkbox"/>	PLUG AND ABANDONMENT <input type="checkbox"/>	PULL OR ALTER CASING <input type="checkbox"/>	OTHER <input type="checkbox"/>	CASING TEST AND CEMENT JOBS <input type="checkbox"/>	
PERFORM REMEDIAL WORK <input type="checkbox"/>	PLUG AND ABANDON <input checked="" type="checkbox"/>	REMEDIAL WORK <input type="checkbox"/>	ALTERING CASING <input type="checkbox"/>											
TEMPORARILY ABANDON <input type="checkbox"/>	CHANGE PLANS <input type="checkbox"/>	COMMENCE DRILLING OPNS. <input type="checkbox"/>	PLUG AND ABANDONMENT <input type="checkbox"/>											
PULL OR ALTER CASING <input type="checkbox"/>	OTHER <input type="checkbox"/>	CASING TEST AND CEMENT JOBS <input type="checkbox"/>												

17. Describe Proposed or Completed Operations (Clearly state all pertinent details, and give pertinent dates, including estimated date of starting any proposed work) SEE RULE 1103.

- Set CIBP @ 2650' & spot 35' (1 sx) cement plug on top.
- Load hole with mud (25 sx gel per 100 bbls water).
- Spot 100' plug at 8-5/8" casing shoe @ 3270'.
- Run freepoint to determine top of cement.
- Spot 100' (5 sx) plug at 2750' (base of salt).
- Cut off casing above 2750' at freepoint.
- Spot 100' (30 sx) plug across casing stub.
- Spot 100' (35 sx) plug at 1740' (top of salt).
- Spot 100' (35 sx) plug at 11-3/4" casing shoe @ 385'.
- Spot 10' (3 sx) cement plug at surface.
- Install marker and clean location.

18. I hereby certify that the information above is true and complete to the best of my knowledge and belief.

SIGNED  TITLE **Asst. Dist. Supt.** DATE **3/17/77**

APPROVED BY _____ TITLE _____ DATE _____

CONDITIONS OF APPROVAL, IF ANY: