

NO. OF COPIES RECEIVED	
DISTRIBUTION	
SANTA FE	
FILE	
U.S.G.S.	
LAND OFFICE	
OPERATOR	

NEW MEXICO OIL CONSERVATION COMMISSION

Form C-103
Supersedes Old
C-102 and C-103
Effective 1-1-65

5a. Indicate Type of Lease	
State <input checked="" type="checkbox"/>	Fee <input type="checkbox"/>
5. State Oil & Gas Lease No. B-5659	

SUNDRY NOTICES AND REPORTS ON WELLS (DO NOT USE THIS FORM FOR PROPOSALS TO DRILL OR TO DEEPEN OR PLUG BACK TO A DIFFERENT RESERVOIR. USE "APPLICATION FOR PERMIT -" (FORM C-101) FOR SUCH PROPOSALS.)

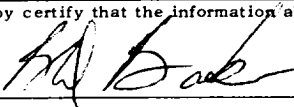
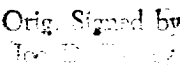
1. OIL WELL <input checked="" type="checkbox"/> GAS WELL <input type="checkbox"/> OTHER <input type="checkbox"/>		7. Unit Agreement Name
2. Name of Operator H. L. Brown, Jr.		8. Farm or Lease Name State B
3. Address of Operator 309 Midland Tower, Midland, Texas 79701		9. Well No. 1
4. Location of Well UNIT LETTER I , 2310 FEET FROM THE south LINE AND 860 FEET FROM THE east LINE, SECTION 6 TOWNSHIP 17-S RANGE 34-E NMPM.		10. Field and Pool Name Vacuum Grayburg San Andres
15. Elevation (Show whether DF, RT, GR, etc.) 4122' GL		12. County Lea

16. Check Appropriate Box To Indicate Nature of Notice, Report or Other Data	
NOTICE OF INTENTION TO:	SUBSEQUENT REPORT OF:
PERFORM REMEDIAL WORK <input type="checkbox"/>	REMEDIAL WORK <input type="checkbox"/>
TEMPORARILY ABANDON <input type="checkbox"/>	COMMENCE DRILLING OPNS. <input type="checkbox"/>
PULL OR ALTER CASING <input type="checkbox"/>	CASING TEST AND CEMENT JOBS <input type="checkbox"/>
OTHER <input type="checkbox"/>	OTHER <input type="checkbox"/>
PLUG AND ABANDON <input checked="" type="checkbox"/>	ALTERING CASING <input type="checkbox"/>
CHANGE PLANS <input type="checkbox"/>	PLUG AND ABANDONMENT <input type="checkbox"/>

17. Describe Proposed or Completed Operations (Clearly state all pertinent details, and give pertinent dates, including estimated date of starting any proposed work) SEE RULE 1103.

We propose to plug and abandon the subject well as follows in accordance with verbal approval obtained January 11, 1974.

1. Spot 40 sx plug at 4650'.
2. Cut and pull 8-5/8" casing.
3. Spot 60 sx plug in 8-5/8" stub.
(100' plugs will be spotted at base and top of salt if casing is pulled from below these points.)
4. Spot 60 sx plug at 395' in and out of 11-3/4" casing.
5. Place 10 sx plug at surface with marker.
6. Hole will be loaded with 9.5# mud.

18. I hereby certify that the information above is true and complete to the best of my knowledge and belief.		
SIGNED 	TITLE Engineer	DATE Jan. 11, 1974
APPROVED BY 	TITLE	DATE
CONDITIONS OF APPROVAL, IF ANY:		