

UNITED STATES
DEPARTMENT OF THE INTERIOR
GEOLOGICAL SURVEY

SUBMIT IN TRIPLICATE
(Other instructions
verse side)

Form approved.
Budget Bureau No. 42-R1424.

SUNDRY NOTICES AND REPORTS ON WELLS

(Do not use this form for proposals to drill or to deepen or plug back to a different reservoir.
Use "APPLICATION FOR PERMIT—" for such proposals.)

1. OIL WELL ☐ GAS WELL ☐ OTHER ☐	5. LEASE DESIGNATION AND SERIAL NO. <u>3252727</u>
2. NAME OF OPERATOR <u>Aztec Oil & Gas Company</u>	6. IF INDIAN, ALLOTTEE OR TRIBE NAME
3. ADDRESS OF OPERATOR <u>Box 327, Lordsburg, NM 88000</u>	7. UNIT AGREEMENT NAME
4. LOCATION OF WELL (Report location clearly and in accordance with any State requirements. See also space 17 below.) At surface <u>1930' NL & 660' AL sec. 21-18s-33e 9 miles Southeast Maljamar New Mexico.</u>	8. FARM OR LEASE NAME <u>Federal OL</u>
14. PERMIT NO.	9. WELL NO. <u>1</u>
15. ELEVATIONS (Show whether DF, RT, GR, etc.) <u>3333 Ground</u>	10. FIELD AND POOL, OR WILDCAT <u>Corbin</u>
	11. SEC., T., R., M., OR BLK. AND SURVEY OR AREA <u>Sec. 21-18s-33e</u>
	12. COUNTY OR PARISH <u>Lea</u>
	13. STATE <u>NM</u>

16. Check Appropriate Box To Indicate Nature of Notice, Report, or Other Data

NOTICE OF INTENTION TO:		SUBSEQUENT REPORT OF:	
TEST WATER SHUT-OFF ☐	PULL OR ALTER CASING ☐	WATER SHUT-OFF ☐	REPAIRING WELL ☐
FRACTURE TREAT ☐	MULTIPLE COMPLETE ☐	FRACTURE TREATMENT ☐	ALTERING CASING ☐
SHOOT OR ACIDIZE ☐	ABANDON* ☐	SHOOTING OR ACIDIZING ☐	ABANDONMENT* ☐
REPAIR WELL ☐	CHANGE PLANS ☐	(Other) ☐	

(Note: Report results of multiple completion on Well Completion or Recompletion Report and Log form.)

17. DESCRIBE PROPOSED OR COMPLETED OPERATIONS (Clearly state all pertinent details, and give pertinent dates, including estimated date of starting any proposed work. If well is directionally drilled, give subsurface locations and measured and true vertical depths for all markers and zones pertinent to this work.) *

It is proposed to abandon in the following manner after consulting with a local USC representative.

1. Set 35 sacks cement plug at 4450' (Penrose sand)
2. Set 35 sacks cement plug at 4292' (Queen)
3. Set 35 sacks cement plug at 3100' (Yates)
4. Set 35 sacks cement plug at 2765' (Base salt)
5. Set 35 sacks cement plug at 1535' (Top salt)
6. Set 35 sacks cement plug at 350' (hoe 8 5/8" casing)
7. Set 10 sacks cement plug at surface, plugs will be circulated down with 10.2 weighted mud. Marker installed, location cleared & leveled.

18. I hereby certify that the foregoing is true and correct


SIGNED original signed by TITLE District Superintendent DATE May 22, 1975
LESTER L. DUKE

(This space for Federal or State office use)

APPROVED BY _____
CONDITIONS OF APPROVAL, IF ANY:

TITLE _____

*See Instructions on Reverse Side

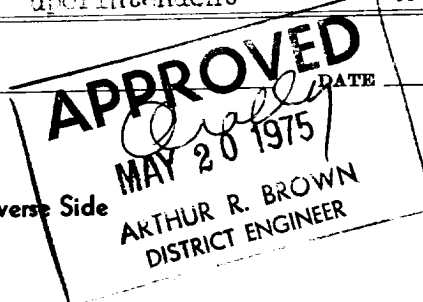

Instructions

General: This form is designed for submitting proposals to perform certain well operations, and reports of such operations when completed, as indicated, on Federal and Indian lands pursuant to applicable Federal law and regulations, and, if approved or accepted by any State, on all lands in such State, pursuant to applicable State law and regulations. Any necessary special instructions concerning the use of this form and the number of copies to be submitted, particularly with regard to local, area, or regional procedures and practices, either are shown below or will be issued by, or may be obtained from, the local Federal and/or State office.

Item 4: If there are no applicable State requirements, locations on Federal or Indian land should be described in accordance with Federal requirements. Consult local State or Federal office for specific instructions.

Item 17: Proposals to abandon a well and subsequent reports of abandonment should include such special information as is required by local Federal and/or State offices. In addition, such proposals and reports should include reasons for the abandonment; data on any former or present productive zones, or other zones with present significant fluid contents not sealed off by cement or otherwise; depths (top and bottom) and method of placement of cement plugs; mud or other material placed below, between and above plugs; amount, size, method of parting of any casing, liner or tubing pulled and the depth to top of any left in the hole; method of closing top of well; and date well site conditioned for final inspection looking to approval of the abandonment.