

NO. OF COPIES RECEIVED		
DISTRIBUTION		
SANTA FE		
FILE		
U.S.G.S.		
LAND OFFICE		
OPERATOR		

HOBBS OFFICE O. C. C.
NEW MEXICO OIL CONSERVATION COMMISSION

Nov 30 10 43 AM '66

Form C-103
Supersedes Old
C-102 and C-103
Effective 1-1-65

5a. Indicate Type of Lease	
State <input checked="" type="checkbox"/>	Fee <input type="checkbox"/>
5. State Oil & Gas Lease No.	
State - B-1036-1	
7. Unit Agreement Name	
NONE	
8. Farm or Lease Name	
N. M. 100 State	
9. Well No.	
3	
10. Field and Pool, or Wildcat	
Vacuum	
12. County	
Lea	

SUNDRY NOTICES AND REPORTS ON WELLS

(DO NOT USE THIS FORM FOR PROPOSALS TO DRILL OR TO DEEPEN OR PLUG BACK TO A DIFFERENT RESERVOIR. USE "APPLICATION FOR PERMIT -" (FORM C-101) FOR SUCH PROPOSALS.)

1. OIL WELL <input checked="" type="checkbox"/> GAS WELL <input type="checkbox"/> OTHER <input type="checkbox"/>
2. Name of Operator
TEXACO Inc.
3. Address of Operator
P. O. Box 728 - Hobbs, New Mexico
4. Location of Well
UNIT LETTER J, 1980 FEET FROM THE North LINE AND 1980 FEET FROM THE East LINE, SECTION 25 TOWNSHIP 17-S RANGE 34-E NMPM.
15. Elevation (Show whether DF, RT, GR, etc.)

16.

Check Appropriate Box To Indicate Nature of Notice, Report or Other Data

NOTICE OF INTENTION TO:

PERFORM REMEDIAL WORK <input checked="" type="checkbox"/>	PLUG AND ABANDON <input type="checkbox"/>
TEMPORARILY ABANDON <input type="checkbox"/>	CHANGE PLANS <input type="checkbox"/>
PULL OR ALTER CASING <input type="checkbox"/>	OTHER <input type="checkbox"/>

SUBSEQUENT REPORT OF:


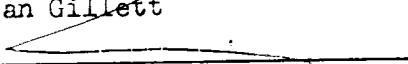
REMEDIAL WORK <input type="checkbox"/>	ALTERING CASING <input type="checkbox"/>
COMMENCE DRILLING OPNS. <input type="checkbox"/>	PLUG AND ABANDONMENT <input type="checkbox"/>
CASING TEST AND CEMENT JOB <input type="checkbox"/>	OTHER <input type="checkbox"/>

17. Describe Proposed or Completed Operations (Clearly state all pertinent details, and give pertinent dates, including estimated date of starting any proposed work) SEE RULE 1103.

We propose to do the following work on subject well:

1. Pull rods & pump, tag bottom with tubing to check fill-up. Dump sand to fill-up to a depth of 4600'.
2. Frac the open hole section in three stages with 1000 pounds of flaked naphthalene between stages, 10,000 gallons refined oil, and 10,000 pounds of sand.
3. Swab well, recover load oil, Test, and return well to production.

18. I hereby certify that the information above is true and complete to the best of my knowledge and belief.

SIGNED 	TITLE Assistant District Superintendent	DATE Nov. 30, 1966
APPROVED BY 	TITLE ENGINEER DISTRICT	DATE
CONDITIONS OF APPROVAL, IF ANY:		