

UNITED STATES
DEPARTMENT OF THE INTERIOR
GEOLOGICAL SURVEYSUBMIT IN TRIPLICATE*
(Other instructions reverse side)Form approved.
Budget: Bureau No. 42-R1424.

5. LEASE DESIGNATION AND SERIAL NO.

N 14-15-1
42-013622 (b)

6. IF INDIAN, ALLOTTEE OR TRIBE NAME

SUNDRY NOTICES AND REPORTS ON WELLS

(Do not use this form for proposals to drill or to deepen or plug back to a different reservoir.
Use "APPLICATION FOR PERMIT—" for such proposals.)

1. OIL WELL <input checked="" type="checkbox"/> GAS WELL <input type="checkbox"/> OTHER <input type="checkbox"/> DRY	7. UNIT AGREEMENT NAME
2. NAME OF OPERATOR CONTINENTAL OIL COMPANY	8. FARM OR LEASE NAME SANDERSON B-1
3. ADDRESS OF OPERATOR P.O. BOX 460 HOBBS, N. MEX.	9. WELL NO. 9
4. LOCATION OF WELL (Report location clearly and in accordance with any State requirements.* See also space 17 below.) At surface 660' FSL + 1980' FEL of SEC. 10	10. FIELD AND POOL, OR WILDCAT WILDCAT
14. PERMIT NO.	15. ELEVATIONS (Show whether DF, RT, GR, etc.) 3581' DF
12. COUNTY OR PARISH LEA	13. STATE N. MEX.

16.

Check Appropriate Box To Indicate Nature of Notice, Report, or Other Data

NOTICE OF INTENTION TO:

TEST WATER SHUT-OFF ☐FRACTURE TREAT ☐SHOOT OR ACIDIZE ☐REPAIR WELL ☐(Other) ☐PULL OR ALTER CASING ☐MULTIPLE COMPLETE ☐ABANDON* ☒CHANGE PLANS ☐

SUBSEQUENT REPORT OF:

WATER SHUT-OFF ☐FRACTURE TREATMENT ☐SHOOTING OR ACIDIZING ☐(Other) ☐REPAIRING WELL ☐ALTERING CASING ☐ABANDONMENT* ☐

(NOTE: Report results of multiple completion on Well Completion or Recompletion Report and Log form.)

17. DESCRIBE PROPOSED OR COMPLETED OPERATIONS (Clearly state all pertinent details, and give pertinent dates, including estimated date of starting any proposed work. If well is directionally drilled, give subsurface locations and measured and true vertical depths for all markers and zones pertinent to this work.)*

It is proposed to plug and abandon this well by the following procedures.

No perforations are open in this well and cement plugs are set to 3864'. Cut 7 7/8" casing at approx. 2500' and pull. Spot a 50 sack cement plug in & out of 7 7/8" stub. Spot a 50 sack cement plug in & out of 10 3/4" casing shoe. Place 10# mud between each cement plug and spot a 10 sx cement plug at surface. Cap well with dry hole marker. Restore location.

AMENDMENT: If 7-5/8" casing is pulled below 1400 feet, spot 50 sack cement plug at 1300-1400 feet. This plug may be in lieu of or in addition to 50 sack plug in stub of 7-5/8" casing.

18. I hereby certify that the foregoing is true and correct

SIGNED

TITLE **ADM. SUPERVISOR**DATE **6-23-71**

(This space for Federal or State office use)


APPROVED BY

CONDITIONS OF APPROVAL, IF ANY:

TITLE

DATE

*See Instructions on Reverse Side

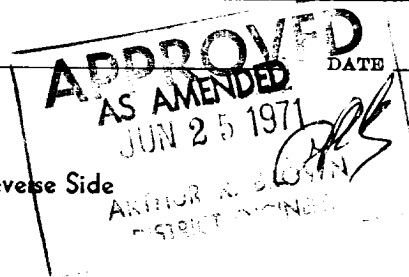

RECEIVED

JUN 24 1971

OIL CONSERVATION COMM.
HOBBS, N. M.