

NO. OF COPIES RECEIVED	
DISTRIBUTION	
SANTA FE	
FILE	
U.S.G.S.	
LAND OFFICE	
OPERATOR	

NEW MEXICO OIL CONSERVATION COMMISSION

Form C-103  
Supersedes Old  
C-102 and C-103  
Effective 1-1-65

5a. Indicate Type of Lease	
State <input type="checkbox"/>	Fee <input checked="" type="checkbox"/>
5. State Oil & Gas Lease No.	

SUNDRY NOTICES AND REPORTS ON WELLS

(DO NOT USE THIS FORM FOR PROPOSALS TO DRILL OR TO DEEPEN OR PLUG BACK TO A DIFFERENT RESERVOIR. USE "APPLICATION FOR PERMIT -" (FORM C-101) FOR SUCH PROPOSALS.)

1. OIL WELL <input checked="" type="checkbox"/> GAS WELL <input type="checkbox"/> OTHER <input type="checkbox"/>		7. Unit Agreement Name
2. Name of Operator <b>Imperial-American Management Co.</b>		8. Farm or Lease Name
3. Address of Operator <b>507 Midland Savings Bldg. Midland, Texas 79701</b>		9. Well Name <b>Lambert</b>
4. Location of well UNIT LETTER <b>N</b> <b>660</b> FEET FROM THE <b>South</b> LINE AND <b>1980</b> FEET FROM THE <b>West</b> LINE, SECTION <b>31</b> TOWNSHIP <b>21-S</b> RANGE <b>38-E</b> N.M.P.M.		10. Field and Pool, or Wildcat <b>Undesignated</b>
15. Elevation (Show whether DF, RT, GR, etc.) <b>3391 KB, 3379 GR</b>		12. County <b>Lea</b>

Check Appropriate Box To Indicate Nature of Notice, Report or Other Data

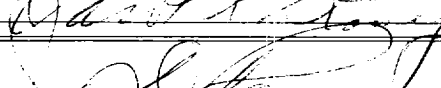
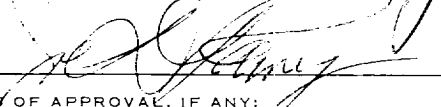
NOTICE OF INTENTION TO:		SUBSEQUENT REPORT OF:	
PERFORM REMEDIAL WORK <input type="checkbox"/>	PLUG AND ABANDON <input checked="" type="checkbox"/>	REMEDIAL WORK <input type="checkbox"/>	ALTERING CASING <input type="checkbox"/>
TEMPORARILY ABANDON <input type="checkbox"/>	CHANGE PLANS <input type="checkbox"/>	COMMENCE DRILLING OPNS. <input type="checkbox"/>	PLUG AND ABANDONMENT <input type="checkbox"/>
PULL OR ALTER CASING <input type="checkbox"/>	OTHER <input type="checkbox"/>	CASING TEST AND CEMENT JOBS <input type="checkbox"/>	

17. Describe Proposed or Completed Operations (Clearly state all pertinent details, and give pertinent dates, including estimated date of starting any proposed work) SEE RULE 1103.

It is proposed to P. & A. this well as follows:

1. Load hole w/ mud.
2. Squeeze perfs 5902-6467' w/ 200 sx class "C".
3. Shoot off 7 5/8" casing at free point- Est. to be above 3000'.
4. Set 100' cement plug at base of salt section from 2650' to 2750'.
5. Set 100' cement plug at top of salt section from 1470' to 1570'.
6. Set 50 sx. cement Plug from 850'-950'. 1/2 in, 1/2 out surface casing.
7. Set 10 sx. plug from surface to 20'.
8. Set Surface marker and clean up location.

18. I hereby certify that the information above is true and complete to the best of my knowledge and belief.

SIGNED 	TITLE <b>Area Manager</b>	DATE <b>1-19-70</b>
APPROVED BY 	TITLE	DATE
CONDITIONS OF APPROVAL, IF ANY:		