

UNITED STATES
DEPARTMENT OF THE INTERIOR
GEOLOGICAL SURVEY

SUBMIT IN TRIPLICATE
(Other instructions on reverse side)

Form approved.
Budget Bureau No. 42-R1424.

5. LEASE DESIGNATION AND SERIAL NO.

LC 019439 (b)

6. IF INDIAN, ALLOTTEE OR TRIBE NAME

7. UNIT AGREEMENT NAME

8. FARM OR LEASE NAME

Geo. B. Higgs "B"

9. WELL NO.

1

10. FIELD AND POOL, OR WILDCAT

Langlia Mattix

11. SEC., T., R., M., OR BLK. AND SURVEY OR AREA

Sec. 1, 26S, 37E

12. COUNTY OR PARISH 13. STATE

Lea

N. Mex.

1. OIL WELL ☒ GAS WELL ☐ OTHER ☐

2. NAME OF OPERATOR

Getty Oil Company

3. ADDRESS OF OPERATOR

Box 249, Hobbs, New Mexico

4. LOCATION OF WELL (Report location clearly and in accordance with any State requirements. See also space 17 below.)
At surface

660 FNL and 660 FEL, Sec. 1

14. PERMIT NO.

15. ELEVATIONS (Show whether DF, RT, GR, etc.)

3040 DF

16. Check Appropriate Box To Indicate Nature of Notice, Report, or Other Data

NOTICE OF INTENTION TO:

TEST WATER SHUT-OFF

FRACTURE TREAT

SHOOT OR ACIDIZE

REPAIR WELL

(Other)

PULL OR ALTER CASING

MULTIPLE COMPLETE

ABANDON*

CHANGE PLANS

SUBSEQUENT REPORT OF:

WATER SHUT-OFF

FRACTURE TREATMENT

SHOOTING OR ACIDIZING

(Other)

REPAIRING WELL

ALTERING CASING

ABANDONMENT*

(NOTE: Report results of multiple completion on Well Completion or Recompletion Report and Log form.)

17. DESCRIBE PROPOSED OR COMPLETED OPERATIONS (Clearly state all pertinent details, and give pertinent dates, including estimated date of starting any proposed work. If well is directionally drilled, give subsurface locations and measured and true vertical depths for all markers and zones pertinent to this work.)*

Well has reached its economic limit. No other productive zones exist. It is proposed to plug and abandon this well as follows:

1. Run tubing to TD. Mud up. Lay 25 sack cement plug. Pull tubing to 2500'. WOC 16 hours. Tag plug to make sure top of cement is above 3300'.
2. If 5-1/2" casing is salvaged:
 - a. Place 25 sack cement plug in and out of 5-1/2" casing stub.
 - b. Put 25 sacks cement at top of salt if not behind previous plug. (Approx. 1000')
 - c. Place 25 sacks cement plug in and out of 8-5/8" casing shoe.
 - d. Place 10 sack cement plug at surface.
 - e. Erect surface marker.
3. If 5-1/2" casing is not salvaged:
 - a. Place 10 sack cement plug at surface.
 - b. Erect surface marker with proper identification.

Amendment: If no 5 1/2" casing is pulled place 15 sack cement plug inside 5 1/2" casing at 900-1000 feet.

18. I hereby certify that the foregoing is true and correct

SIGNED Original Signed By
C. L. WADE

TITLE Area Superintendent


DATE June 2, 1971

(This space for Federal or State office use)

APPROVED BY
CONDITIONS OF APPROVAL, IF ANY:

TITLE

*See Instructions on Reverse Side

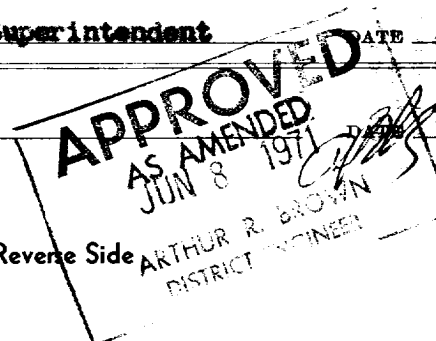

Instructions

General: This form is designed for submitting proposals to perform certain well operations, and reports of such operations when completed, as indicated, on Federal and Indian lands pursuant to applicable Federal law and regulations, and, if approved or accepted by any State, on all lands in such State, pursuant to applicable State law and regulations. Any necessary special instructions concerning the use of this form and the number of copies to be submitted, particularly with regard to local, area, or regional procedures and practices, either are shown below or will be issued by, or may be obtained from, the local Federal and/or State office.

Item 4: If there are no applicable State requirements, locations of Federal or Indian land should be described in accordance with Federal requirements. Consult local State or Federal office for specific instructions.

Item 17: Proposals to abandon a well and subsequent reports of abandonment should include such special information as is required by local Federal and/or State offices. In addition, such proposals and reports should include reasons for the abandonment; data on any former or present productive zones, or other zones with present significant fluid contents not sealed off by cement or otherwise; depths (top and bottom) and method of placement of cement plugs; and of other material placed below, between and above plugs; amount, size, method of parting of any casing, liner or tubing pulled and the depth to top of any left in the hole; method of closing top of well; and date well site conditioned for final inspection looking to approval of the abandonment.

U.S. GOVERNMENT PRINTING OFFICE: 1963-O-685229

847-485

RECEIVED

JUN 1 1971

OIL CONSERVATION COMM.
40388, N. M.