

UNITED STATES  
DEPARTMENT OF THE INTERIOR  
GEOLOGICAL SURVEY

SUBMIT IN TRIPPLICATE\*  
(Other instructions on re-  
verse side)

Form approved.  
Budget Bureau No. 42-R1424.  
LEASE DESIGNATION AND SERIAL NO.  
NM - 25742

SUNDRY NOTICES AND REPORTS ON WELLS

(Do not use this form for proposals to drill or to deepen or plug back to a different reservoir.  
Use "APPLICATION FOR PERMIT—" for such proposals.)

1. OIL WELL <input checked="" type="checkbox"/> GAS WELL <input type="checkbox"/> OTHER <input type="checkbox"/>		6. IF INDIAN, ALLOTTEE OR TRIBE NAME
2. NAME OF OPERATOR TEXACO Inc.		7. UNIT AGREEMENT NAME Rhodes Yates Unit
3. ADDRESS OF OPERATOR P. O. Box 728, Hobbs, New Mexico 88240		8. FARM OR LEASE NAME Rhodes Yates Unit
4. LOCATION OF WELL (Report location clearly and in accordance with any State requirements.* See also space 17 below.) At surface 1980' FSL & 660' FEL of Section 21, T-26-S, R-37-E, Unit letter 'I', Lea County, New Mexico		9. WELL NO. 1
14. PERMIT NO. Regular	15. ELEVATIONS (Show whether DF, RT, GR, etc.) 2977' (DF)	10. FIELD AND POOL, OR WILDCAT Rhodes Yates
		11. SEC., T., R., M., OR BLK. AND SURVEY OR AREA Sec. 21, T-26-S, R-37-E
		12. COUNTY OR PARISH Lea
		13. STATE New Mexico

16. Check Appropriate Box To Indicate Nature of Notice, Report, or Other Data

NOTICE OF INTENTION TO:

TEST WATER SHUT-OFF ☐  
FRACTURE TREAT ☐  
SHOOT OR ACIDIZE ☒  
REPAIR WELL ☐  
(Other) ☐

PULL OR ALTER CASING ☐  
MULTIPLE COMPLETE ☐  
ABANDON\* ☐  
CHANGE PLANS ☐

SUBSEQUENT REPORT OF:

WATER SHUT-OFF ☐  
FRACTURE TREATMENT ☐  
SHOOTING OR ACIDIZING ☐  
(Other) ☐

REPAIRING WELL ☐  
ALTERING CASING ☐  
ABANDONMENT\* ☐

(NOTE: Report results of multiple completion on Well Completion or Recompletion Report and Log form.)

17. DESCRIBE PROPOSED OR COMPLETED OPERATIONS (Clearly state all pertinent details, and give pertinent dates, including estimated date of starting any proposed work. If well is directionally drilled, give subsurface locations and measured and true vertical depths for all markers and zones pertinent to this work.)\*

1. Rig up. Pull rods & pump. Install BOP. Pull tubing.
2. Clean out to 3253' (TD). Log well.
3. Set pkr. @ 3050'. Acidize open-hole 3093' - 3253' w/3500 gal. 15% NE Acid in 3-equal stages using from 500# - 700# 50-50 mix of rock salt & Benzoic acid flakes between stages.
4. Install pumping equipment. Treat w/scale inhibitor.
5. Test & return to production.

18. I hereby certify that the foregoing is true and correct

SIGNED

TITLE Asst. Dist. Supt.


DATE 10-5-77

(This space for Federal or State office use)

APPROVED BY

TITLE

CONDITIONS OF APPROVAL, IF ANY:

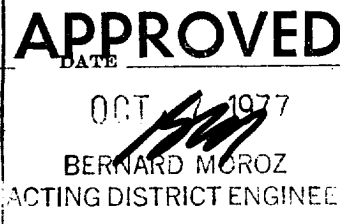

\*See Instructions on Reverse Side