

UNITED STATES
DEPARTMENT OF THE INTERIOR
GEOLOGICAL SURVEY

SUBMIT IN TRIPLY
(Other instruction:
verse side)

TE*
re-

Form approved.
Budget Bureau No. 42-R1424.

5. LEASE DESIGNATION AND SERIAL NO.

NM-0554974

6. IF INDIAN, ALLOTTEE OR TRIBE NAME

7. UNIT AGREEMENT NAME

8. FARM OR LEASE NAME

Rowden Fed.

9. WELL NO.

1

10. FIELD AND POOL, OR WILDCAT

Drinkard

11. SEC., T., R., M., OR BLK. AND
SURVEY OR AREA

Sec. 4, T. 23S, R. 28W

12. COUNTY OR PARISH 13. STATE

Lea

N.M.

SUNDRY NOTICES AND REPORTS ON WELLS

(Do not use this form for proposals to drill or to deepen or plug back to a different reservoir.
Use "APPLICATION FOR PERMIT—" for such proposals.)

1. OIL WELL ☒ GAS WELL ☐ OTHER

2. NAME OF OPERATOR

Imperial American Mgt.

3. ADDRESS OF OPERATOR P. O. Box 1005

~~2155 KIRKMAN BLVD., MIDLAND, TEXAS 79701~~

4. LOCATION OF WELL (Report location clearly and in accordance with any State requirements.*
See also space 17 below.)
At surface

660' FNL and 1980' FWL (Lot 2)

14. PERMIT NO.

15. ELEVATIONS (Show whether DF, RT, or etc.)

16. Check Appropriate Box To Indicate Nature of Notice, Report, or Other Data

NOTICE OF INTENTION TO:

TEST WATER SHUT-OFF

FRACTURE TREAT

SHOOT OR ACIDIZE

REPAIR WELL

(Other)

PULL OR ALTER CASING

MULTIPLE COMPLETE

ABANDON*

CHANGE PLANS

SUBSEQUENT REPORT OF:

WATER SHUT-OFF

FRACTURE TREATMENT

SHOOTING OR ACIDIZING

(Other)

REPAIRING WELL

ALTERING CASING

ABANDONMENT*

(NOTE: Report results of multiple completion on Well
Completion or Recompletion Report and Log form.)

17. DESCRIBE PROPOSED OR COMPLETED OPERATIONS (Clearly state all pertinent details, and give pertinent dates, including estimated date of starting any
proposed work. If well is directionally drilled, give subsurface locations and measured and true vertical depths for all markers and zones perti-
nent to this work.)*

Production from this well has exhausted. We propose to plug and ~~xx~~ abandon
as follows:

1. Place 50 sack cement plug at 6200-6400 feet
2. Place 35 sack cement plug at 5400-5550 feet
3. Place 25 sack cement plug at 4100-4200 feet
4. Cut and pull 7" casing from about 3000 feet
5. Place 30 sack cement plug at 7' stub
6. Place 35 sack cement plug at 2600-2700 feet
7. Place 50 sack cement plug at 800-900 feet
8. Hole to be filled with mud between plugs

18. I hereby certify that the foregoing is true and correct

SIGNED C. T. Brackett


TITLE Agent

DATE 12-1-75

(This space for Federal or State office use)

APPROVED BY
CONDITIONS OF APPROVAL, IF ANY:

TITLE

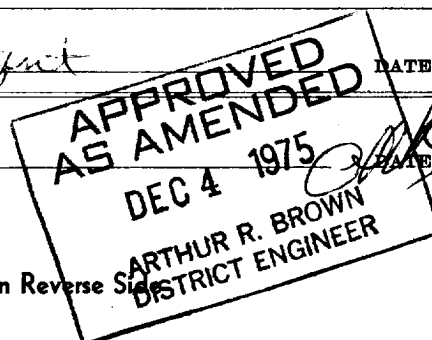

*See Instructions on Reverse

Instructions

General: This form is designed for submitting proposals to perform certain well operations, and reports of such operations when completed, as indicated, on Federal and Indian lands pursuant to applicable Federal law and regulations, and, if approved or accepted by any State, on all lands in such State, pursuant to applicable State law and regulations. Any necessary special instructions concerning the use of this form and the number of copies to be submitted, particularly with regard to local, area, or regional procedures and practices, either are shown below or will be issued by, or may be obtained from, the local Federal and/or State office.

Item 4: If there are no applicable State requirements, locations on Federal or Indian land should be described in accordance with Federal requirements. Consult local State or Federal office for specific instructions.

Item 17: Proposals to abandon a well and subsequent reports of abandonment should include such special information as is required by local Federal and/or State offices. In addition, such proposals and reports should include reasons for the abandonment; data on any former or present productive zones, or other zones with present significant fluid contents not sealed off by cement or otherwise; depths (top and bottom) and method of placement of cement plugs; mud or other material placed below, between and above plugs; amount, size, method of parting of any casing, liner or tubing pulled and the depth to top of any left in the hole; method of closing top of well; and date well site conditioned for final inspection looking to approval of the abandonment.

