

UNITED STATES
DEPARTMENT OF THE INTERIOR
GEOLOGICAL SURVEYSUBMIT IN TRIPLICATE*
(Other instructions
verse side)Form approved.
Budget Bureau No. 42-R1424.

SUNDRY NOTICES AND REPORTS ON WELLS

(Do not use this form for proposals to drill or to deepen or plug back to a different reservoir.
Use "APPLICATION FOR PERMIT—" for such proposals.)

1. OIL WELL ☒ GAS WELL ☐ OTHER ☐		5. LEASE DESIGNATION AND SERIAL NO. 11M-050435	
2. NAME OF OPERATOR Union Texas Petroleum Corporation		6. IF INDIAN, ALLOTTEE OR TRIBE NAME	
3. ADDRESS OF OPERATOR 1300 Wilco Building, Midland, Texas 79701		7. UNIT AGREEMENT NAME	
4. LOCATION OF WELL (Report location clearly and in accordance with any State requirements.* See also space 17 below.) At surface		8. FARM OR LEASE NAME Carlson	
14. PERMIT NO.		9. WELL NO. 2	
15. ELEVATIONS (Show whether DF, RT, CR, etc.) 1980' FNL and 660' FWL		10. FIELD AND POOL, OR WILDCAT Jalmat	
		11. SEC., T., R., M., OR BLK. AND SURVEY OR AREA Sec. 21, 25S, R-37-E	
		12. COUNTY OR PARISH Lea	
		13. STATE New Mexico	

16. Check Appropriate Box To Indicate Nature of Notice, Report, or Other Data

NOTICE OF INTENTION TO:

TEST WATER SHUT-OFF

FRACTURE TREAT

SHOOT OR ACIDIZE

REPAIR WELL

(Other)

PULL OR ALTER CASING

MULTIPLE COMPLETE

ABANDON*

CHANGE PLANS

Plug and Abandon

☒

SUBSEQUENT REPORT OF:

WATER SHUT-OFF

FRACTURE TREATMENT

SHOOTING OR ACIDIZING

(Other)

REPAIRING WELL

ALTERING CASING

ABANDONMENT*

(NOTE: Report results of multiple completion on Well Completion or Recompletion Report and Log form.)

17. DESCRIBE PROPOSED OR COMPLETED OPERATIONS (Clearly state all pertinent details, and give pertinent dates, including estimated date of starting any proposed work. If well is directionally drilled, give subsurface locations and measured and true vertical depths for all markers and zones pertinent to this work.)*

Effective 7-31-⁶⁹~~70~~, this well ceased producing in paying quantities. We now propose to Plug and Abandon as follows: After determining free point on 7" casing, will cut and pull same. Spot 25 sack cement plug in and out of stub of 7" casing. Spot 10 sack cement plug on top of hole, cap well and install steel marker. Work will start when permit granted.

AMENDMENT:

- Place additional 25 sack cement plug at 2700-2810 feet.
- If 7" is pulled below a depth of 1150 feet, place a 30 sack cement plug at 1050-1150 feet instead of in and out of 7" casing stub. If 7" is pulled from above a depth of 1150 feet place a 30 sack plug in and out of 7" stub and also a 25 sack plug inside 7" casing at 1050-1150 feet.
- Hole to be filled with mud between plugs.

Please notify this office 24 hours prior to commencing plugging operations.

18. I hereby certify that the foregoing is true and correct

SIGNED

TITLE Office Supervisor

DATE 7-15-70


(This space for Federal or State office use)

APPROVED BY

TITLE

DATE

CONDITIONS OF APPROVAL, IF ANY:

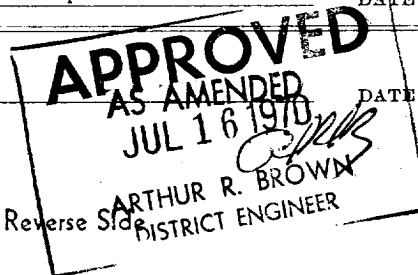

*See Instructions on Reverse Side

Instructions

General: This form is designed for submitting proposals to perform certain well operations, and reports of such operations when completed, as indicated, on Federal and Indian lands pursuant to applicable Federal law and regulations, and, if approved or accepted by any State, on all lands in such State, pursuant to applicable State law and regulations. Any necessary special instructions concerning the use of this form and the number of copies to be submitted, particularly with regard to local, area, or regional procedures and practices, either are shown below or will be issued by, or may be obtained from, the local Federal and/or State office.

Item 4: If there are no applicable State requirements, locations on Federal or Indian land should be described in accordance with Federal requirements. Consult local State or Federal office for specific instructions.

Item 17: Proposals to abandon a well and subsequent reports of abandonment should include such special information as is required by local Federal and/or State offices. In addition, such proposals and reports should include reasons for the abandonment; data on any former or present productive zones, or other zones with present significant fluid contents not sealed off by cement or otherwise; depths (top and bottom) and method of placement of cement plugs; mud or other material placed below, between and above plugs; amount, size, method of parting of any casing, liner or tubing pulled and the depth to top of any left in the hole; method of closing top of well; and date well site conditioned for final inspection looking to approval of the abandonment.