



Appendices

Appendix 6 – Sand Dunes – Site Photographs



Site Photographs – Recycling Containment #1 – Sand Dunes

Photograph #1a: View from southwest corner looking north.



Photograph #2b: View from northwest corner looking southeast.



***Sand Dunes Recycling Facility and Containments
C-147 Registration Package***



Photograph #2c: View from northeast corner looking southwest.



Appendices

Appendix 7 – Mesa Verde – Site Photographs



Site Photographs – Recycling Containment #2 – Mesa Verde



Photograph #2a: View from southwest corner looking northeast. (Men pointing toward northwest corner.)



***Sand Dunes Recycling Facility and Containments
C-147 Registration Package***



**Photograph #2b:
View from
northwest corner
looking
southeast.**



Photograph #2c: View from northwest corner looking north at nearby well.



Appendices

Appendix 8 – OSE Water Wells – Average Depth to Water



New Mexico Office of the State Engineer

Water Column/Average Depth to Water

(A CLW##### in the POD suffix indicates the POD has been replaced & no longer serves a water right file.)

(R=POD has been replaced,
O=orphaned,
C=the file is closed)

Table 1

(quarters are 1=NW 2=NE 3=SW 4=SE)

(quarters are smallest to largest) (NAD83 UTM in meters)

(In feet)

POD Number	POD Sub-Code	basin	County	Q 64	Q 16	Q 4	Sec	Tws	Rng	X	Y	Depth Well	Depth Water	Water Column
C 02258	C	ED		3	2	26	23S	31E		618055	3571853*	662		
C 02348	C	ED		1	4	3	26	23S	31E	617648	3571068	700	430	270
C 02492		ED		4	4	4	06	23S	31E	612056	3577320*	135	85	50
C 02492 POD2	C	ED		3	2	2	07	23S	31E	611767	3576996	400	125	275
C 02664		ED		3	3	2	05	23S	31E	613049	3578138*	4291	354	3937
C 02725		ED		1	1	1	05	23S	31E	612240	3578731*	532		
C 02773		ED		4	1	3	03	23S	31E	615668	3577762*	880		
C 02774		ED		3	1	3	04	23S	31E	613857	3577745*	1660		
C 02775		ED		1	1	1	05	23S	31E	612240	3578731*	529		
C 02776		ED		2	1	1	05	23S	31E	612440	3578731*	661		
C 02777	CUB	ED		4	4	4	10	23S	31E	616974	3575662	890		
C 02865		ED		4	4	4	06	23S	31E	612056	3577320*	174		
C 02954 EXPL		ED		3	1	4	20	23S	31E	613114	3572906*	905		
C 03140		ED		4	2	4	04	23S	31E	615266	3577758*	684		
C 03351	C	ED		4	1	4	04	23S	31E	614917	3577861	320	168	152
C 03520 POD1	C	ED		3	1	1	07	23S	31E	610733	3576905	500		

Average Depth to Water: **232 feet**

Minimum Depth: **85 feet**

Maximum Depth: **430 feet**

Record Count: 16

Basin/County Search:

Basin: Carlsbad

County: Eddy

PLSS Search:

Township: 23S

Range: 31E

*UTM location was derived from PLSS - see Help

The data is furnished by the NMOSE/ISC and is accepted by the recipient with the expressed understanding that the OSE/ISC make no warranties, expressed or implied, concerning the accuracy, completeness, reliability, usability, or suitability for any particular purpose of the data.



New Mexico Office of the State Engineer

Water Column/Average Depth to Water

(A CLW##### in the POD suffix indicates the POD has been replaced & no longer serves a water right file.)

(R=POD has been replaced,
O=orphaned,
C=the file is closed)

Table 2

(quarters are 1=NW 2=NE 3=SW 4=SE)

(quarters are smallest to largest) (NAD83 UTM in meters)

(In feet)

POD Number	POD Sub-Code	basin	County	Q 64	Q 16	Q 4	Sec	Tws	Rng	X	Y	Depth Well	Depth Water	Water Column
C 02216		CUB	LE	2	2	4	21	23S	32E	625035	3573261*	585	400	185
C 02349			ED		2	3	03	23S	32E	625678	3578004*	525		
C 03529 POD1		C	LE	2	4	3	29	23S	32E	622651	3571212	550		
C 03749 POD1		CUB	LE	3	4	4	07	23S	32E	616974	3575662	865	639	226
C 03851 POD1		CUB	LE	3	3	4	20	23S	32E	622880	3572660	1392	713	679

Average Depth to Water: **584 feet**

Minimum Depth: **400 feet**

Maximum Depth: **713 feet**

Record Count: 5

Basin/County Search:

Basin: Carlsbad

PLSS Search:

Township: 23S

Range: 32E

Draft Only

*UTM location was derived from PLSS - see Help

The data is furnished by the NMOSE/ISC and is accepted by the recipient with the expressed understanding that the OSE/ISC make no warranties, expressed or implied, concerning the accuracy, completeness, reliability, usability, or suitability for any particular purpose of the data.



New Mexico Office of the State Engineer

Water Column/Average Depth to Water

(A CLW##### in the POD suffix indicates the POD has been replaced & no longer serves a water right file.)

(R=POD has been replaced,
O=orphaned,
C=the file is closed)

Table 3

(quarters are 1=NW 2=NE 3=SW 4=SE)

(quarters are smallest to largest) (NAD83 UTM in meters)

(In feet)

POD Number	POD Sub-Code	basin	County	Q 64	Q 16	Q 4	Sec	Tws	Rng	X	Y	Depth Well	Depth Water	Water Column
C 02405	C	ED		4	1	02	24S	31E		617690	3568631*	275	160	115
C 02440	C	ED		2	3	10	24S	31E		616103	3566599*	350		
C 02460	C	ED		3	02		24S	31E		617496	3568022*	320		
C 02460 POD2	C	ED		3	02		24S	31E		617496	3568022*	320		
C 02464	C	ED		3	4	1	02	24S	31E	617589	3568530*	320	205	115
C 02661		ED		3	3	1	04	24S	31E	613969	3568485*	708		
C 02783	CUB	ED		3	3	1	04	24S	31E	613911	3568461	708		
C 02783 POD2	C	ED		3	3	1	04	24S	31E	613911	3568461	672		
C 02784	C	ED		4	2	4	04	24S	31E	613911	3568461	584		
C 02785		ED		3	3	1	04	24S	31E	613969	3568485*	692		

Average Depth to Water: **182 feet**

Minimum Depth: **160 feet**

Maximum Depth: **205 feet**

Record Count: 10

Basin/County Search:

Basin: Carlsbad

County: Eddy

PLSS Search:

Township: 24S

Range: 31E

*UTM location was derived from PLSS - see Help

The data is furnished by the NMOSE/ISC and is accepted by the recipient with the expressed understanding that the OSE/ISC make no warranties, expressed or implied, concerning the accuracy, completeness, reliability, usability, or suitability for any particular purpose of the data.



New Mexico Office of the State Engineer

Water Column/Average Depth to Water

(A CLW##### in the POD suffix indicates the POD has been replaced & no longer serves a water right file.)

(R=POD has been replaced, O=orphaned, C=the file is closed)

Table 4

(quarters are 1=NW 2=NE 3=SW 4=SE)

(quarters are smallest to largest) (NAD83 UTM in meters)

(In feet)

POD Number	POD Sub-Code	basin	County	Q 64	Q 16	Q 4	Sec	Tws	Rng	X	Y	Depth Well	Depth Water	Water Column
C 03527 POD1	C	LE		1	2	3	03	24S	32E	625770	3568487	500		
C 03528 POD1	C	LE		1	1	2	15	24S	32E	626040	3566129	541		
C 03530 POD1	C	LE		3	4	3	07	24S	32E	620886	3566156	550		
C 03555 POD1	C	LE		2	2	1	05	24S	32E	622709	3569231	600	380	220

Average Depth to Water: 380 feet

Minimum Depth: 380 feet

Maximum Depth: 380 feet

Record Count: 4

Basin/County Search:

Basin: Carlsbad

County: Lea

PLSS Search:

Township: 24S


Range: 32E

Draft Only



Appendices


Appendix 9 – Sand Dunes – FEMA FIRM

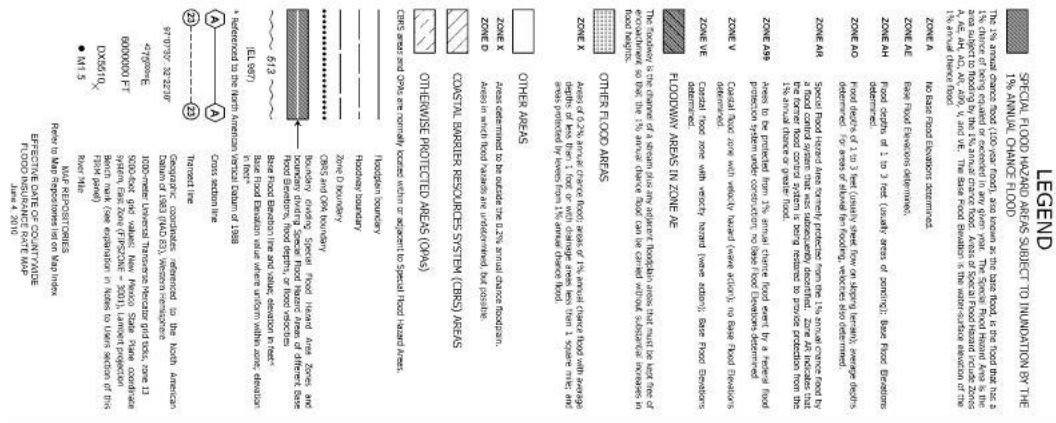



Appendices

Appendix 10 – Mesa Verde - FEMA FIRM

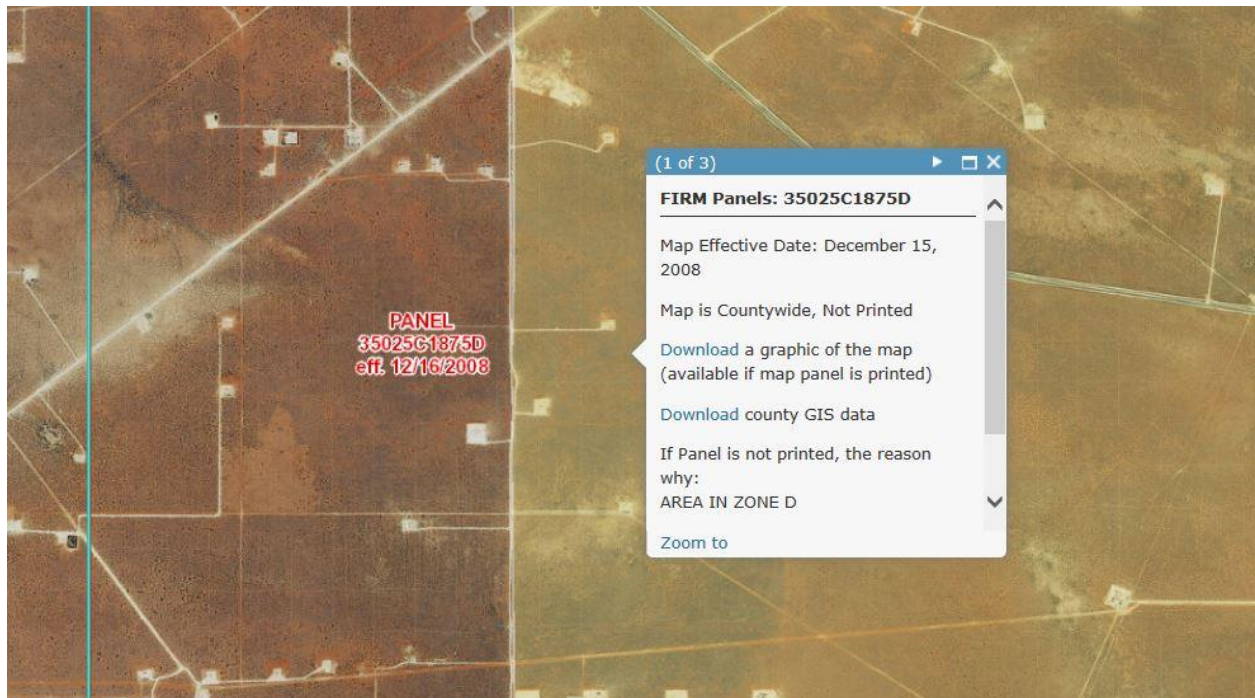

(1 of 3)

FIRM Panels: 35025C1875D

Map Effective Date: December 15, 2008

Map is Countywide, Not Printed

[Download a graphic of the map](#)
(available if map panel is printed)

[Download county GIS data](#)

If Panel is not printed, the reason
why:

AREA IN ZONE D

[Zoom to](#)



Appendices

Appendix 11 – Mega Blaster PRO

EFFECTIVE WIDE-AREA BIRD CONTROL!

Mega Blaster PRO sonic bird repeller covers 30 acres!



Mega Blaster PRO uses intermittent distress calls to create a "danger zone" that frightens infesting birds away for good.

PREDATOR cries help scare all the birds.



- NEMA Rated Case
- Crystal-Clear Digital Sounds

- Laughing Gull
- Ring-Billed Gull
- Herring Gull
- California Gull
- Black-Headed Gull
- Glaucous-Winged Gull
- Double Crested Cormorant
- Marsh Hawk

**Perfect for Landfills, Airfields, Fish Farms,
Farm Fields or any multi-acre facility.**

Our most powerful system features two high-output amplifiers that drive our specially-designed 20 speaker tower. The intense sound output covers up to 30 acres (12 hectares).

It features solid-state electronics mounted inside a NEMA-type control box, suitable for most any application.

The generating unit mounts easily to a post or pole using the included hardware. The unit comes pre-recorded in four different configurations for the most common bird infestations.

Choose any or all of the 8 sounds, including predators to give the birds even more of a sense of danger. Customize by choosing volume and silent time between sounds.

Mega Blaster PRO

Complete system includes the generating unit with two built-in high-output amplifiers, 20-speaker tower with audio cables, 40 watt solar panel, battery clips and all mounting hardware.

CONFIGURATIONS AVAILABLE:

- Agricultural
MEGA-AG
- Crow / Raven
MEGA-CROW
- Woodpecker
MEGA-WP
- Marine / Gull
MEGA-MAR



The Bird Control 'X'-Perts

NOTE: This unit is capable of sound output up to 125 decibels. **HEARING PROTECTION IS RECOMMENDED.**




MEGA BLASTER PRO



User's Manual

Overview	2
Bird Control Management Guidelines	3
Materials List	4
Assembly	5
Control Unit	5
Solar Panel	5
Placement	6
Building a Mounting Pole or Mast	7
Installation	8
20-Speaker Tower	8
Solar Panel	8
Control Box	9
Solar Panel Connections	9
Settings	10
Recordings	10
Mode Settings	10
Warranty	12

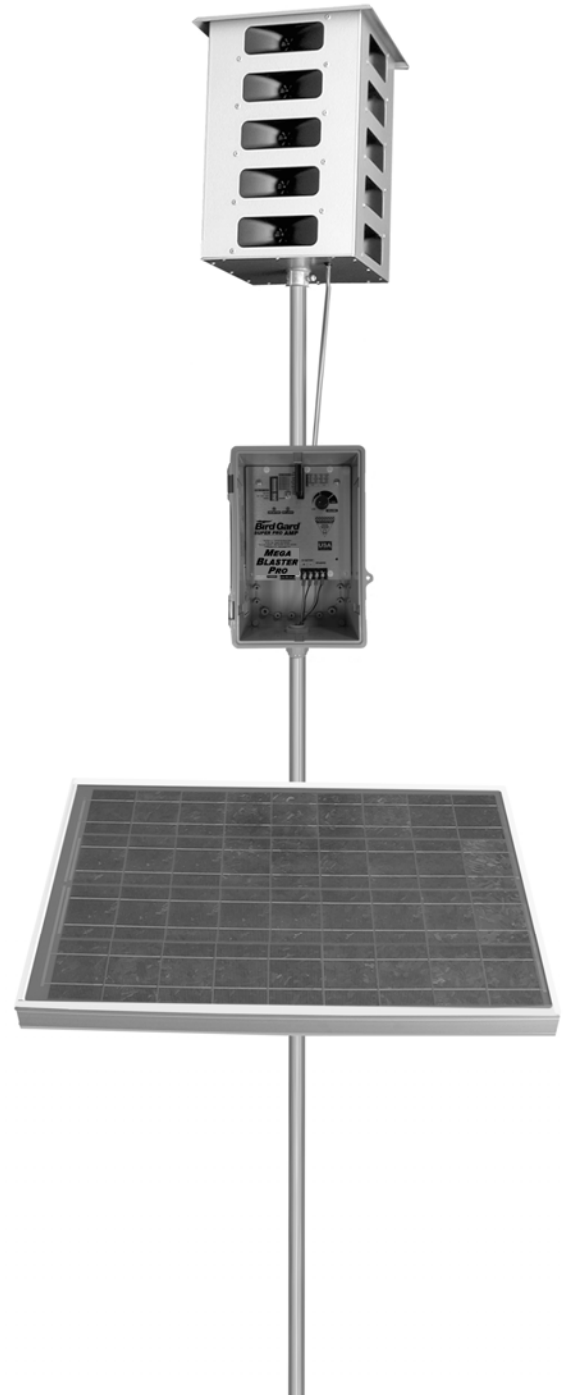

Overview


The Bird-X Mega Blaster Pro utilizes the innate power of the natural survival instincts of birds to effectively repel them. Digital recordings of distressed and alarmed birds, along with the sounds made by their natural predators are broadcast through high fidelity weather-resistant speakers over the top of areas. This action triggers a primal fear and flee response. Pest birds soon relocate to where they can feed without feeling threatened.

Your Bird-X Mega Blaster Pro system consists of:

20-Speaker Tower broadcasts the bird sounds

Control Unit produces the bird sounds and contains all operational controls

Solar Panel recharges the 12-volt deep cycle battery

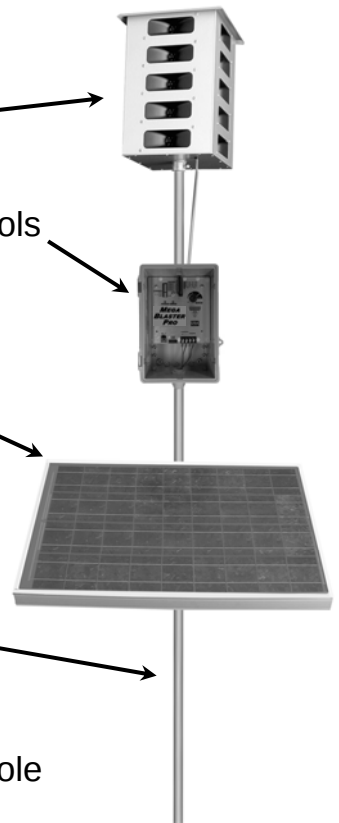

Items needed but not included:

- (1) **Mounting Pole or Mast** tall enough to raise the 20-Speaker Tower at least 5 feet above the top of the areas, trees or other obstructions
- (1) **12-volt Deep Cycle Battery** (RV/Marine) Group 27 or larger wet cell
- (1) **T-Post** or similar (Optional) may be needed to support the mounting pole
- (1) **Bailing Wire or zip-tie** (Optional) to secure the Mounting Pole to the T-Post

CAUTION: THE MEGA BLASTER PRO IS CAPABLE OF PRODUCING SOUNDS UP TO 125 DECIBELS. PROPER HEARING PROTECTION MUST BE WORN ANYTIME THE UNIT IS TURNED ON.



Bird Control Management Guidelines


An active bird control management program is a key to successfully repelling pest birds. Bird feeding patterns may take several days or weeks to break. Follow all suggestions for maximum effectiveness. Read all instructions prior to installation.

For best results:

- **It is extremely important to fully protect your entire area from birds.** Any areas not fully protected will allow birds to begin feeding at the fringes of the sound coverage. They will soon become bolder and learn the sounds are nothing to fear. This will cause the effectiveness to diminish. Complete Bird-X product coverage forces birds to leave the area entirely.
- Install the Mega Blaster Pro unit at least two weeks before birds are attracted to your area. It is much easier to keep birds away before they have found a food source than it is to repel them once they have developed a feeding pattern.
- Most birds begin feeding from the perimeter of an area. Place Mega Blaster Pro units so the sound protection covers past the edges of the area.
- Birds will often use tall trees for roosting and observation. If birds are in bordering trees it is necessary to position the units so the sound protection covers the trees as well.
- Mount the 20-Speaker Tower at least five feet above trees, areas and structures for maximum coverage. The higher the better. Sound will disperse or reflect off structures or foliage. Mount control unit out of direct sun, if possible.
- When first installed, run Mega Blaster Pro units at FULL volume and on SHORT time off periods. This ensures maximum “bird stress” and creates a hostile environment.
- Watch for changes in bird activity and adjust the location of your Mega Blaster Pro unit if needed.
- **Check the battery and unit settings often to insure continuous bird control. Be certain that the system is not turned down or has a dead battery. Field hands or harvesters may turn down the volume.**
- Changing settings and switches often helps to prevent bird habituation. Periodically change the switch settings of the eight sounds (turning them ON or OFF). NEVER turn OFF the distress calls of the target birds you are trying to repel and always keep at least one predator bird sound turned ON.
- If different bird species enter the protected area and begin causing damage contact us immediately for an updated Sound Recording Card designed to repel the new invading birds.
- Remember that the Mega Blaster Pro system is a management tool, and should be used as part of your overall bird control strategy, sometimes in conjunction with other bird control techniques and devices.

Be aware that under extreme drought or other adverse conditions, birds will disregard all deterrents and risks in order to survive

Materials List

Item	Qty		Notes
Mega Blaster Pro Control Box	1		
Sound Recording Card	1		Pre-installed in control box
20-Speaker Tower	1		
Control Box Mounting U-Bolts	2		1/4" x 1" x 2"
Control Box Brackets	2		
40-Watt Solar Panel	1		
Solar Panel Mounting Bracket	1		
Solar Panel Mounting U-Bolts	2		1/4" x 1-1/8" x 2"
Control Box Connector Cable	1		2 Wire, 4 ft. Long
Battery Box	1		

Assembly

Note: You will find it easier to pre-assemble the following components prior to installation in the field.

Control Unit

1. Lay the Control Unit face down
2. Attach the two Control Box Mounting Brackets to the back with the included screws (Figure 1)

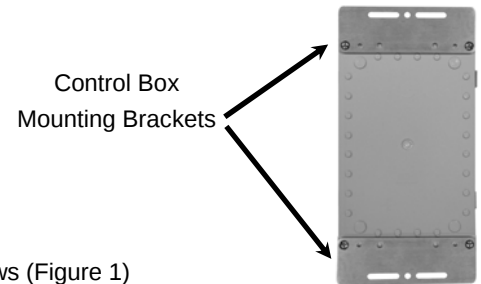


Figure 1

Solar Panel

3. Install the two Solar Panel Mounting U-Bolts in the Head of the Solar Panel Mounting Bracket (Figure 2)
4. Loosen, but do not remove the Carriage Bolts securing the movable Clamp Plates on the Solar Panel Mount Bracket
5. Lay the solar panel on a flat surface with the glass side down
6. Lay the Mounting Arm across the Solar Panel with the Clamp Plates down. Position the Mounting Arm at an angle so the Clamp Plates slide under the lip of the Solar Panel (Figure 3A)
7. Rotate the Mounting Arm and secure it to the Solar Panel by tightening the Carriage Bolts (Figure 3B)

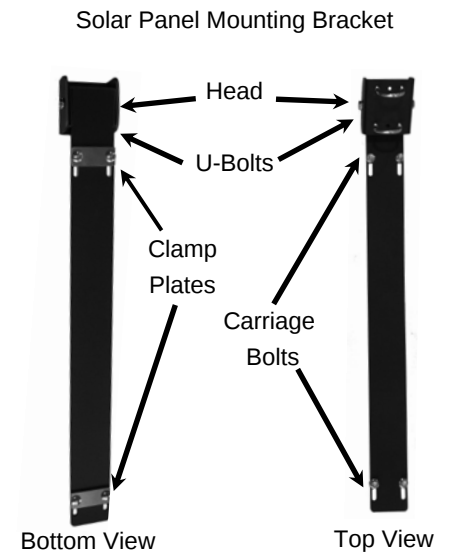


Figure 2

Clamp Plates slide under the lip of the Solar Panel

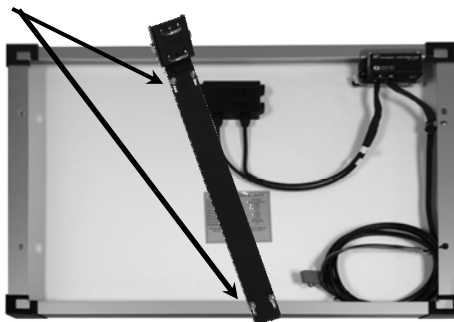


Figure 3A

Rotate Mounting Arm and tighten Carriage Bolts



Figure 3B

Placement

Your Mega Blaster Pro will protect an area up to approximately 600 feet in all directions.

Factors to consider when selecting the best location include:

- Birds typically feed from the perimeter of the area and work their way in. Place Mega Blaster Pro units so the sound protection covers all the way to the edges of the area. For larger areas Mega Blaster Pro units should be positioned 400-500 feet inside the area and spaced every 1,200 feet.
- Mount the 20-Speaker Tower at least 5 feet above terrain, areas, trees and other obstacles.
- Placing the Mega Blaster Pro on top of a hill or small rise will give you much better coverage than at the bottom of a valley. The greater the height the further the sounds will travel.
- Wind can blow the sound waves. If the area you need to protect has consistent wind coming from the same direction, position your Mega Blaster Pro more “upwind.”
- Trees surrounding areas provide birds with a safe perch that allows them to fly in, grab food and fly out. It is much more difficult to eliminate bird damage if the birds are able to use the surrounding trees as a staging area for attacks on your areas. Your Mega Blaster Pro unit should be positioned close to any trees bordering your areas. If birds are roosting in the trees at night the TIME OF OPERATION should be set to 24 HOUR.
- Lakes, rivers and wetlands are a favorite resting and hiding place for birds. Your Mega Blaster Pro unit should be placed so the sound thoroughly covers any areas where birds frequent.
- Neighbors, businesses and others may not appreciate hearing the bird sounds. At the limits of the effective range the sounds from your Mega Blaster Pro are at a level people may find annoying. Avoid placing the unit where it becomes a nuisance.

Building a Mounting Pole or Mast

CAUTION: TALL POLES AND MASTS CAN BE HEAVY AND POTENTIALLY DANGEROUS. USE EXTREME CAUTION WHEN CONSTRUCTING OR WORKING AROUND TALL POLES AND MASTS. BIRD-X, INC., ASSUMES NO RESPONSIBILITY FOR DAMAGES OR INJURIES.

Things to consider:

- The 20-Speaker Tower is designed to mount onto a 1 in. (outside diameter) pipe at least 14 in. long. 1 in. conduit works well as it is light, rigid, inexpensive and available in 10 ft. lengths making it ideal for low areas, vineyards and bushes.
- You will want to take down your Mega Blaster Pro unit after harvest and store it in a dry location until the next season.

A suggestion for masts up to 20 feet tall:

1. 3/4 inch Galvanized steel water pipe has a 1 inch outside diameter and is the correct size to fit inside the 20-Speaker Tower. It is often available in 20 ft. lengths from hardware and plumbing supply stores. If these are not available, 10 ft. lengths are common and can be fastened together with a threaded coupler. Assemble the poles on the ground.
2. Slide the 20-Speaker Tower over the pipe and tighten the set screw in the collar at the base.
3. Stand the pole assembly up just inside the drip line of a tree and securely tie the pole to a few heavy branches.
4. Drive a T-Post into the ground at the base of the pole and secure with wire.

For masts taller than 20 feet:

1. Use 20 ft. lengths of galvanized steel water pipe or similar, securely fastened together with threaded reducing couplers.
2. Starting with 3 in. pipe, step the size down with each length of pipe.
3. The last 10 ft. can be 1 in. (O.D.) conduit hose clamped to the final section of galvanized pipe.

A semi-permanent mast support can be made by digging a hole 4 ft. deep and 4 ft. round. In the middle of the hole sink a length of galvanized water pipe large enough that your mast will easily fit inside. Make sure at least 2 ft. of pipe is above ground level. Fill the area around the pipe with packed sand, leaving the last foot filled with concrete to form a cap over the hole. Your mast can be dropped into the galvanized water pipe “receiver” for support. At the end of harvest the mast can be lifted out and positioned on the ground for easy disassembly and storage.

Installation

Note: Foliage, trees, and other obstructions severely reduce the effective range of Mega Blaster Pro units. It is critical that the 20-Speaker Tower is mounted at least 5 feet above all obstructions to achieve the maximum protection.

Mounting Pole or Mast

1. The Mounting Pole or Mast will need to be supported by a T-Post, fence post, tree or other means. The Pole Support should be in place before proceeding.

20-Speaker Tower

2. Lay the 20-Speaker Tower on its side on the ground and cut the zip-tie securing the speaker cables.
3. Slide the 1 in. (outside diameter) Mounting Pole through the Collar at the bottom of the 20-Speaker Tower until it slides over the positioning bolt inside the top of the Tower (Figure 4).
4. Tighten the Set Screw in Collar securely.

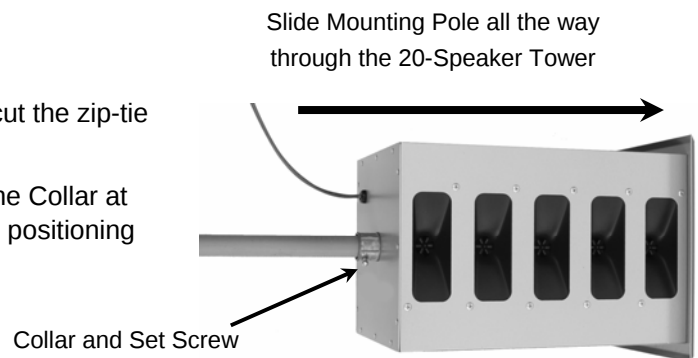


Figure 4

Solar Panel

5. Rest the lower end of the Mounting Pole on the Solar Panel Mounting Bracket approximately three feet from the bottom of the pole with the top of the solar panel facing the 20-Speaker Tower (Figure 5).
6. Lean up the Mounting Pole with the 20-Speaker Tower on top, against the Pole Support and fasten the Mounting Pole to the Pole Support securely with wire or other semi-permanent means.
7. Rotate the solar panel so it receives sunlight.

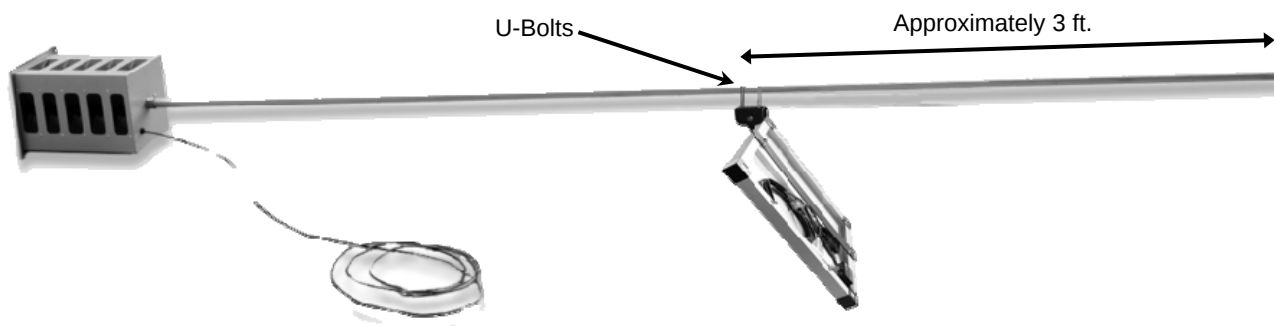


Figure 5

Control Box

8. Attach the Control Box to the Mounting Pole with the U-Bolts.
9. Feed the Speaker Cables through the Cable Strain Relief at the bottom
10. Attach the Speaker Cables from the 20-Speaker Tower to the screws marked "SPEAKER" on the faceplate of the control panel.
11. Locate the Control Box Connector Cable (the grey 2 lead cables) and feed one end through the Cable Strain Relief.
12. Connect the RED wire to the screw marked "+" and the BLACK wire to the screw marked "-" under "12V BATTERY" on the faceplate of the control panel.
13. **MAKE SURE THE POWER SWITCH IS TURNED OFF BEFORE ATTACHING BATTERY.**
14. Connect the other end of the RED wire to the "+" terminal on the 12-volt Deep Cycle battery (not included). Connect the BLACK wire to the "-" terminal on the battery.
15. Hand tighten the Tapered Cinch Nut on the bottom of the Cable Strain Relief to help keep insects and moisture out.

Control Box Connector to Voltage Regulator

Cable Strain Relief

Tapered Cinch Nut

Speaker Cables

Figure 6


Solar Panel Connections

16. Cut the black zip-ties securing the RED and BLACK wires on the underside of the solar panel. (Figure 7)
17. Connect the RED wire to the "+" terminal on the 12-volt battery and connect the BLACK wire to the "-" terminal on the battery.

NOTE: If you are using a "Sealed Gel" 12-volt battery (instead of a Lead Acid battery) you will need to cut the indicated small BLUE wire on the attached voltage regulator. This prevents Sealed Gel batteries from being overcharged. Failure to cut this wire can result in permanent battery damage. (Figure 8)

Figure 7

Solar Controller

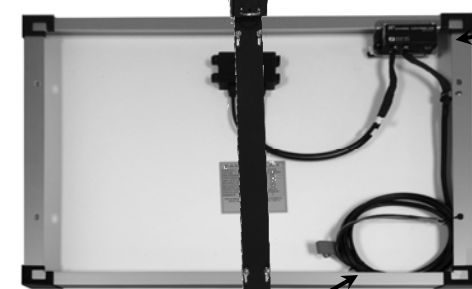

RED and BLACK wires connect to BATTERY



Figure 8

CAUTION: The Mega Blaster Pro is capable of producing sounds up to 125 decibels. Hearing protection must be worn anytime the unit is on!



Settings

Repelling birds requires regular monitoring and active management. Birds are intelligent and highly adaptable so it is important to create and maintain an environment the birds perceive as hostile and dangerous. This is achieved by playing the sounds frequently and at a high volume, otherwise the birds will not be fully repelled and will soon learn to adapt.

Below are the initial settings that should be used when your Mega Blaster Pro is first installed. Please see the “Bird Control Management Guidelines” section for more information.

Recordings

There are eight separate bird sounds contained on the Replaceable Sound Card. The label on the sound card lists each sound with a number corresponding to the eight “RECORDINGS” dip switches to the left of the Sound Card. Initially all RECORDING switches should be turned ON. If the target birds begin returning, periodically change the switch settings for the eight sounds (turning them ON or OFF). **NOTE: NEVER turn OFF the distress calls of the target birds you are trying to repel and always keep at least one predator bird sound turned ON.**

Mode Settings

TIME OFF INTERVAL controls the time off periods between each playing of the bird recordings.

Setting	Time Off Duration	Switch #1	Switch #2
SHORT	17-50 Seconds	ON	OFF
MEDIUM	1:00-4:15 Minutes	OFF	ON
LONG	5:00-10:00 Minutes	ON	ON
XLONG	10:00-30:00 Minutes	OFF	OFF


When the Mega Blaster Pro unit is first installed the **TIME OFF INTERVAL** should be set to **SHORT** to create the greatest sense of danger and move the birds out of the area the fastest. Once the birds have left the area completely for a week or more you may try increasing the **TIME OFF INTERVAL** gradually, but you must monitor the birds carefully. Switch back to **SHORT** at the first sign birds are returning.

TIME OF OPERATION controls when the bird recordings play.

Setting	Switch #3	Switch #4
DAY ONLY	ON	OFF
24-HOUR	OFF	ON
NIGHT ONLY	ON	ON

In most cases birds are only active during the day so the **DAY ONLY** is recommended. If birds are roosting in bordering trees at night you will need to set the **TIME OF OPERATION** for **24-HOUR**.

RANDOM OPERATION should always be turned **ON**. **VOLUME** should be set as high as possible.

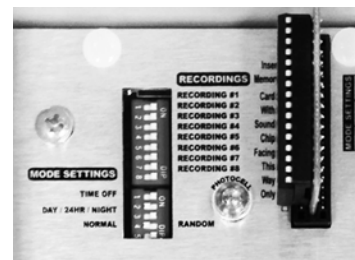

Recommended Settings

Troubleshooting

Problem	Possible Cause	Solution
No Sound	Volume turned down	Turn volume up
	Dead battery	Charge or replace battery
	Loose battery connection	Verify all battery connections are tight
	All RECORDINGS are turned OFF	Verify all RECORDINGS are switched to ON
	Sound Card not fully seated	Remove sound card and reinstall, making sure it is fully inserted into the socket
	Sound Card is installed backward	Unplug the sound card and reinstall with the label facing to the left
	TIME OF OPERATION set to DAY ONLY without enough light	Change TIME OF OPERATION to 24-HOUR
	Unit was not shut down before the battery was disconnected causing the unit to go into "SAFE MODE"	1. Turn the POWER switch OFF 2. Disconnect the battery 3. Remove the sound card 4. Wait 30 seconds 5. Reinstall sound card 6. Reconnect the battery 7. Turn the POWER switch ON
Was working but stopped	The battery is dead	Connect the battery to a battery charger and see if it will hold a charge. Replace if necessary
	Solar Panel is not getting enough sunlight	Reposition the Solar Panel

Limited Warranty

THIS MEGA BLASTER PRO UNIT IS WARRANTED AGAINST DEFECTS IN MATERIAL AND WORKMANSHIP FOR SIX MONTHS FROM DATE OF PURCHASE (EXTENDED WARRANTY AVAILABLE). BIRD-X WILL REPLACE OR REPAIR, PROVIDED DEFECT OCCURS UNDER NORMAL USE. *RETURNS ACCEPTED ONLY WITH AUTHORIZATION FROM OUR CHICAGO OFFICE.*



300 North Oakley Blvd.

Chicago, IL 60612

Toll-Free (800) 662-5021

Fax (312) 312-2480

www.Bird-X.com

Info@Bird-X.com

©2013 Bird-X, Inc. All Rights Reserved.

Bird-X® is a patented trademark of Bird-X, Inc.

EPA Establishment Number 075130-OR-001

Mega Blaster Pro P/N 655-0065-00 (Rev. 9/2013)





Appendices

Appendix 12 – Weekly Inspection Report

		Weekly Inspection Report Water Treatment Facility and Containment		
Work Order No:				
Inspected by (name and signature):				Date/Time:
Review of Prior Corrections	Yes	No	N/A	Comments
Have all identified issues from the previous facility inspection report been corrected and noted?				
Equipment Description	Leak or spill? (Y/N)	Working condition? (Good / Needs Repairs)	Comments	
Water Treatment Facility				
Upstream Pump (20 HP)				
Flow Line to Reaction Tanks				
Reaction Tanks				
Treatment pump (50 HP)				
Weir Tanks				
Manifold at Weir Tank				
Recycle & Flowback Lines				
Downstream Pump (20 HP)				
Flow Line to Treated Water Pond				
Treated Water Containment(s) / Pond(s)				
Manifold				
Leak Detection System*				
Are exposed liners intact?*				
Does surface show visible oil?				
Fluid Height of Staff Gauge(s):				
<i>* If a liner's integrity is compromised, or if any penetration of the liner occurs above the water surface, then the operator will notify the District office within 48 hours (phone or email).</i>				
Additional Comments (including any equipment not checked off):				



Appendices

Appendix 13 – Monthly Inspection Report



Monthly Inspection Report

Treated Water Containment / Pond

Work Order No:

Inspected by (name and signature):

Date/Time:

Review of Prior Corrections	Yes	No	N/A	Comments
Have all identified issues from the previous facility inspection report been corrected and noted?				
Equipment Description	Yes or No	Working condition? (Good / Needs Repairs)	Comments	
Are diversion ditches and berms around the containment secure? (check for erosion and collection of surface water run-on)				
Is the leak detection system intact? (check for evidence of damage or malfunction and monitor for leakage).				
Are there any dead migratory birds and other wildlife inside pond/treated water?*				
Are the sources and disposition of all recycled water recorded?**				
* Within 30 days of discovery, report the discovery of dead migratory birds or other wildlife to the appropriate wildlife agency and to the division district office in order to facilitate assessment and implementation of measures to prevent incidents from reoccurring ** Report to the division the total volume of water received for recycling, with the amount of fresh water received listed separately, and the total volume of water leaving the facility for disposition by use of the form C-148				
Additional Comments (including any equipment not checked off):				